JOHNSON PUMP
AN SPX BRAND

Instruction Manual

CombiPrime H

Horizontal self-priming centrifugal pump

Orginal instructions

Read and understand this manual prior to operating or servicing this product.

CH/EN (0912) 5.2

SPX®

EC Declaration of conformity (valid until 30-12-2009)

(Directive 98/37/EC, appendix II-A)

Manufacturer

SPX Process Equipment NL B.V.
Dr. A.F. Philipsweg 51
P.O. Box 9
9400 AA Assen
The Netherlands

hereby declares that the pump, in case it is delivered as an assembly with drive (last position of serial number = A), is in conformity with the provisions of Directive 98/37/EC (as altered most recently) and the following directives and standards:

- EC directive 2006/95/EG, "Electric equipment for use within certain voltage limits"
- standards EN-ISO 12100 part 1 & 2, EN 809

The pump to which this declaration refers may only be put into operation after it has been installed in the way prescribed by the manufacturer, and, as the case may be, after the complete system of which this pump forms part, has been made to fulfil the requirements of Directive 98/37/EC (as altered most recently).

Manufacturer's declaration (valid until 30-12-2009)

(Directive 98/37/EC, appendix II-B)

Manufacturer

SPX Process Equipment NL B.V.
Dr. A.F. Philipsweg 51
P.O. Box 9
9400 AA Assen
The Netherlands

hereby declares that the pump, in case it is delivered without drive (last position of serial number = B), is in conformity with the following standards:

- EN-ISO 12100 parts 1 & 2, EN 809

and that this pump is meant to be incorporated in or combined with another machine (electric motor, combustion engine) and may only be put into use after the complete machine of which the pump under consideration forms part has been made and declared to comply with that directive.

Assen, November 1st 2009

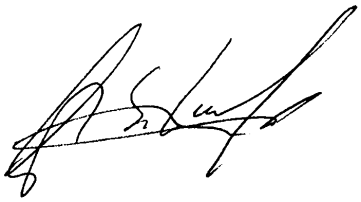

G.A. Schaafsma,

General manager

EC Declaration of conformity (valid from 30-12-2009)

(Directive 2006/42/EC, appendix II-A)

Manufacturer

SPX Process Equipment NL B.V.
Dr. A.F. Philipsweg 51
9403 AD Assen
The Netherlands

hereby declares that all pumps member of productfamilies CombiBloc, CombiBlocHorti, CombiChem, CombiDirt, CombiFlex(U)(B), CombiPrime H, CombiLine, CombiLineBloc, CombiMag, CombiMagBloc, CombiNorm, CombiPro(M)(V), CombiPrime V, CombiSump, CombiWell, FRE, FRES, FREF, FREM, KGE(L), KGEF, HCR, MCH(W)(S), MCHZ(W)(S), MCV)(S), PHA, MDR whether delivered without drive (last position of serial number = B), or delivered as an assembly with drive (last position of serial number = A), are in conformity with the provisions of Directive 2006/42/EC (as altered most recently) and where applicable the following directives and standards:

- EC directive 2006/95/EG, "Electric equipment for use within certain voltage limits"
- standards EN-ISO 12100 part 1 & 2, EN 809

The pumps to which this declaration refers may only be put into operation after they have been installed in the way prescribed by the manufacturer, and, as the case may be, after the complete system of which these pumps form part, has been made to fulfil the requirements of Directive 2006/42/EC (as altered most recently).

Declaration of incorporation (valid from 30-12-2009)

(Directive 2006/42/EC, appendix II-B)

Manufacturer

SPX Process Equipment NL B.V.
Dr. A.F. Philipsweg 51
9403 AD Assen
The Netherlands

hereby declares that the partly completed pump (Back-Pull-Out unit), member of productfamilies CombiBloc, CombiBlocHorti, CombiChem, CombiDirt, CombiFlex(U)(B), CombiPrime H, CombiLine, CombiLineBloc, CombiMag, CombiMagBloc, CombiNorm, CombiPro(M)(V), CombiPrime V, FRE, FRES, FREF, FREM, KGE(L), KGEF, HCR, PHA, MDR is in conformity with the following standards:

- EN-ISO 12100 parts 1 & 2, EN 809

and that this partly completed pump is meant to be incorporated into the specified pump unit and may only be put into use after the complete machine of which the pump under consideration forms part has been made and declared to comply with that directive.

Assen, November 1st 2009

G.A. Schaafsma,

General Manager

Instruction manual CombiPrime H

All technical and technological information in this manual as well as possible drawings made available by us remain our property and shall not be used (otherwise than for the operation of this pump), copied, duplicated, made available to or brought to the notice of third parties without our prior written consent.

SPX Process Equipment NL B.V. (hereafter called Johnson Pump) is part of SPX Process Equipment AB. The core activities of SPX Process Equipment AB are the development, production, sale and maintenance of pumps and pump units.

SPX Process Equipment NL B.V.
P.O. Box 9
9400 AA Assen
The Netherlands

Tel. +31 (0)592 376767
Fax. +31 (0)592 376760
www.johnson-pump.com or www.spxpe.com

© 2008 SPX Process Equipment NL B.V.

Table of Contents

1 Introduction 9

1.1 Preface 9
1.2 Safety 9
1.3 Guarantee 10
1.4 Inspection of delivered items 10
1.5 Instructions for transport and storage 10
1.5.1 Dimensions and weight 10
1.5.2 Use of pallets 10
1.5.3 Hoisting 11
1.5.4 Storage 11
1.6 Ordering parts 12

2 General 13

2.1 Pump description 13
2.2 Type code 13
2.3 Serial number 14
2.4 Application 14
2.5 Construction 14
2.5.1 Pump casing/impeller/pump shaft 14
2.5.2 Shaft sealing 15
2.5.3 Self-priming part 15
2.5.4 Bearing construction 15
2.6 Application area 15
2.7 Re-use 15
2.8 Scrapping 15

3 Installation 17

3.1 Safety 17
3.2 Conservation 17
3.3 Environment 17
3.4 Mounting 18
3.4.1 Installation of a pump unit 18
3.4.2 Assembling a pump unit 18
3.4.3 Alignment of the coupling 18
3.4.4 Tolerances for aligning the coupling 19
3.5 Piping 20
3.6 Mounting accessories centrifugal pump 20
3.7 Vacuum pump with service liquid tank 21
3.7.1 Mounting of accessories 21
3.7.2 Connection diagram with service liquid tank 21

3.7.3 Indication of connections 21
3.7.4 Installation examples with service liquid tank 22
3.8 Vacuum pump with float-controlled de-aerator 26
3.8.1 Mounting of accessories 26
3.8.2 Connection diagram with float-controlled de-aerator 26
3.8.3 Indication of connections 26
3.8.4 Installation examples with float-controlled de-aerator 27
3.9 Connection of the electric motor 31
3.10 Combustion engine 31
3.10.1 Safety 31
3.10.2 Sense of rotation 31

4 Commissioning 33

4.1 Control centrifugal pump part 33
4.2 Control vacuum pump part 33
4.3 Control motor 33
4.4 Checking the sense of rotation 33
4.5 Starting the pump 34
4.6 Adjusting the air-inlet valve 34
4.7 Mechanical seal 34
4.8 Check 34
4.9 Noise 34

5 Maintenance 35

5.1 Daily maintenance 35
5.2 Service liquid 35
5.3 Shaft sealing 35
5.3.1 Mechanical seal 35
5.3.2 Lip seal 35
5.4 Lubrication of the bearings 35
5.5 Environmental influences 36
5.6 Noise 36
5.7 Faults 36

6 Cause of failures 37

7 Disassembly and assembly 39

7.1 Precautionary measures 39
7.2 Tools 39
7.3 Liquid draining 39
7.4 Item numbers 39
7.5 Construction variants 40
7.6 Back Pull Out system 40
7.6.1 Disassembly coupling guard 40
7.6.2 Disassembly Back Pull Out unit 40
7.6.3 Assembly Back Pull Out unit 41
7.6.4 Assembling the guard 41
7.7 Replacement of impeller and wear ring 44
7.7.1 Disassembly of the impeller 44
7.7.2 Assembly of the impeller 44
7.7.3 Disassembly of the wear ring 45
7.7.4 Assembling the wear ring 45
7.8 Shaft sealing 46
7.8.1 Disassembly of the mechanical seals M2 46
7.8.2 Assembly of the mechanical seals M2 47
7.8.3 Disassembly of the lip seals M4 48

7.8.4 Assembly of the lip seals M4 49
7.9 Bearing 50
7.9.1 Disassembly of bearings and pump shaft 50
7.9.2 Assembly of bearings and pump shaft 51
7.10 Adjustment of the axial play 52

8 Dimensions 53

8.1 Dimensions pump 54
8.2 Dimensions pump and motor with standard coupling 55
8.3 Dimensions pump and motor with spacer coupling 57
8.4 Dimensions baseplate 59
8.5 Dimensions pump with service liquid tank 60
8.6 Dimensions pump with float de-aerator 62

9 Parts 65

9.1 Ordering parts 65
9.1.1 Order form 65
9.1.2 Recommended spare parts 65
9.2 Pump parts 66
9.3 Parts of shaft sealing group M2 68
9.4 Parts of shaft sealing group M4 69
9.5 Parts of service liquid tank TL 70
9.6 Parts of float de-aerator VL 72

10 Technical data 75

10.1 Recommended greases 75
10.2 Recommended locking liquids 75
10.3 Tightening moments 75
10.3.1 Tightening moments for bolts and nuts 75
10.3.2 Tightening moments for cap nuts 75
10.4 Permissible forces and moments on the flanges 76
10.5 Hydraulic performance 78
10.6 Noise data 80
10.6.1 Pump noise as a function of pump power 80
10.6.2 Noise level of entire pump unit 81

Index 83

Order form for spare parts 85

1 Introduction

1.1 Preface

This manual is intended for technicians and maintenance staff and for those who are in charge of ordering spare parts.

This manual contains important and useful information for the proper operation and maintenance of this pump. It also contains important instructions to prevent potential accidents and damage, and to ensure safe and fault-free operation of this pump.

! **Read this manual carefully before commissioning the pump, familiarize yourself with the operation of the pump and strictly obey the instructions!**

The data published here comply with the most recent information at the time of going to press. However they may be subject to later modifications.

Johnson Pump reserves the right to change the construction and design of the products at any time without being obliged to change earlier deliveries accordingly.

1.2 Safety

This manual contains instructions for working safely with the pump. Operators and maintenance staff must be familiar with these instructions.

Below is a list of the symbols used for those instructions and their meaning:

⚠ ***Personal danger for the user. Strict and prompt observance of the corresponding instruction is imperative!***

! **Risk of damage or poor operation of the pump. Follow the corresponding instruction to avoid this risk.**

➢ *Useful instruction or tip for the user.*

Items which require extra attention are shown in **bold print**.

This manual has been compiled by Johnson Pump with the utmost care. Nevertheless Johnson Pump cannot guarantee the completeness of this information and therefore assumes no liability for possible deficiencies in this manual. The buyer/user shall at all times be responsible for testing the information and for taking any additional and/or deviating safety measures. Johnson Pump reserves the right to change safety instructions.

1.3 Guarantee

Johnson Pump shall not be bound to any guarantee other than the guarantee accepted by Johnson Pump. In particular, Johnson Pump will not assume any liability for explicit and/or implicit guarantees such as but not limited to the marketability and/or suitability of the products supplied.

The guarantee will be cancelled immediately and legally if:

- Service and/or maintenance is not undertaken in strict accordance with the instructions.
- The pump is not installed and operated in accordance with the instructions.
- Necessary repairs are not undertaken by our personnel or are undertaken without our prior written permission.
- Modifications are made to the products supplied without our prior written permission.
- The spare parts used are not original Johnson Pump parts.
- Additives or lubricants used are other than those prescribed.
- The products supplied are not used in accordance with their nature and/or purpose.
- The products supplied have been used amateurishly, carelessly, improperly and/or negligently.
- The products supplied become defective due to external circumstances beyond our control.

All parts which are liable to wear are excluded from guarantee. Furthermore, all deliveries are subject to our “General conditions of delivery and payment”, which will be forwarded to you free of charge on request.

1.4 Inspection of delivered items

Check the consignment immediately on arrival for damage and conformity with the advice note. In case of damage and/or missing parts, have a report drawn up by the carrier at once.

1.5 Instructions for transport and storage

1.5.1 Dimensions and weight

A pump or a pump unit is generally too heavy to be moved by hand. Therefore, use the correct transport and lifting equipment. Dimensions and weight of the pump or pump unit are shown on the label on the cover of this manual.

1.5.2 Use of pallets

Usually a pump or pump unit is shipped on a pallet. Leave it on the pallet as long as possible to avoid damages and to facilitate possible internal transport.

! When using a forklift always set the forks as far apart as possible and lift the package with both forks to prevent it from toppling over! Avoid jolting the pump when moving it!

1.5.3 Hoisting

When hoisting a pump or complete pump units the straps must be fixed in accordance with figure 1 and figure 2.

⚠ ***When lifting a pump or a complete pump unit always use a proper and sound lifting device, approved to bear the total weight of the load!***

⚠ ***Never go underneath a load that is being lifted!***

! **If the electric motor is provided with a lifting eye, this lifting eye is intended only for the purpose of carrying out service activities to the electric motor! The lifting eye is designed to bear the weight of the electric motor only! It is NOT permitted to lift a complete pump unit at the lifting eye of an electric motor!**

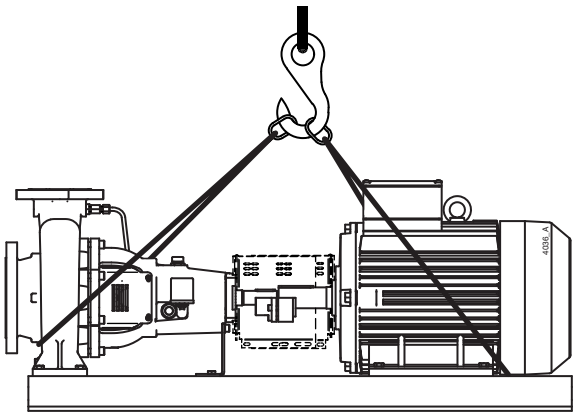

Figure 1: Lifting instructions for pump unit.

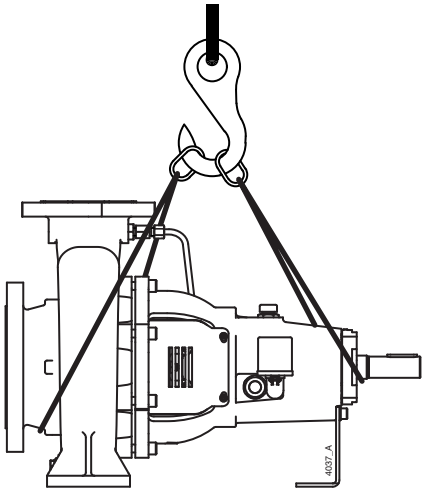

Figure 2: Lifting instructions for single pump.

1.5.4 Storage

If the pump is not to be used immediately the pump shaft must be turned by hand twice per week.

1.6 Ordering parts

This manual contains a survey of the spare parts recommended by Johnson Pump as well as the instructions for ordering them. A fax-order form is included in this manual.

You should always state all data stamped on the type plate when ordering parts and in any other correspondence regarding the pump.

➢ *This data is also printed on the label on the front of this manual.*

If you have any questions or require further information with regard to specific subjects, then do not hesitate to contact Johnson Pump.

2 General

2.1 Pump description

The CombiPrime H is a range of horizontal self-priming centrifugal pumps. Hydraulic application area complies with DIN 24255. The flange dimensions, bolt circle and number of holes comply with DIN 2532 ND 10. The CombiPrime H is characterized by the built-in vacuum pump.

Thus it is possible to pump fluids mixed with air (gas) or only air during the suction phase. The built-in vacuum pump is based on the liquid ring principle. The pump is driven by a standard IEC foot motor. The power is transmitted through a flexible coupling. Because of their modular lay-out, constructional components are widely interchangeable, also with other pump types of the Combi system.

2.2 Type code

Pumps of the CombiPrime H family are available in various designs. The main characteristics of the pump are shown in the type code.

Example: **CH 40-200 B2 M2 TL**

pump family		
CH	**C**ombiPrime **H**	
pump size		
40-200	diameter discharge connection [mm] - nominal impeller diameter [mm]	
pump casing/pump cover and impeller material		
G1	pump casing/pump cover: cast iron	impeller: cast iron
G2	pump casing/pump cover: cast iron	impeller: bronze
G3	pump casing/pump cover: cast iron	impeller: alum. bronze
B2	pump casing/pump cover: bronze	impeller: bronze
B3	pump casing/pump cover: bronze	impeller: alum. bronze
shaft sealing		
M2	mechanical seals on shaft sleeves	
M4	tab ring seals on shaft sleeves	
de-aerating unit		
TL	works liquid receiver + air inlet valve	
VL	float de-aerator + air inlet valve	

2.3 Serial number

Serial number of the pump or pump unit are shown on the name plate off the pump and on the label on the cover of this manual.

Example: **01-1000675A**

01	year of manufacture
100067	unique number
5	number of pumps
A	pump with motor
B	pump with free shaft end

2.4 Application

- In general, the CombiPrime H pumps can be used for thin, clean or slightly polluted liquids. These liquids should not affect the pump materials.
- The maximum allowed system pressure and temperature and the maximum speed depend on the pump type and the pump construction. For relevant data see paragraph 2.6 "Application area".
- Further details about the application possibilities of your specific pump are mentioned in the order confirmation and/or in the data sheet enclosed with the delivery.
- Please do not use the pump for purposes other than those for which it is delivered without prior consultation with your supplier.

⚠ ***Using a pump in a system or under system conditions (liquid, working pressure, temperature, etc.) for which it has not been designed may hazard the user!***

2.5 Construction

The CombiPrime H is a pump range with a modular lay-out. The main components are described below:

- Pump casing/impeller/pump shaft
- Shaft seal
- Self-priming unit
- Bearing

The CombiPrime H pumps are available in 3 bearing bracket groups, meaning that bearing and shaft sealing are divided into 3 groups. Furthermore, the pumps have been standardized in 5 groups featuring the same connection for pump cover and bearing pedestal, depending on the nominal impeller diameters. The pump covers are clamped between the pump casing and bearing bracket.

2.5.1 Pump casing/impeller/pump shaft

These are the parts that get into contact with the pumped liquid. For each individual pump type there is only one construction of the pump casing and the impeller. The pump casing is available in cast iron and in bronze, the impeller in cast iron, bronze and aluminium bronze. The pump shaft is available in alloyed and stainless steel. With the available materials the pumps can be supplied in a construction suitable to pump sea water.

2.5.2 Shaft sealing

On both sides of the self-priming part there is a mechanical seal or a number of lip seals. Both are mounted on shaft sleeves, which have been sealed in such a way that the pumped liquid cannot touch the pump shaft. The mechanical seals meet EN 12756 (DIN 24960), with the exception of the mounting length. The lip seals are mounted on stainless steel shaft sleeves which have been provided with a hard chromium oxide wearing layer.

2.5.3 Self-priming part

The self-priming part consists of a built-in vacuum pump which is working according to the liquid ring principle, an air-inlet valve with a check valve and a service liquid tank or float controlled air-relief valve. The vacuum pump part is mounted on the pump shaft, but works separately from the centrifugal pump. The service liquid which is supplied to the hub section of the vacuum pump has to maintain the liquid ring. Apart from that, it also serves for cooling and lubrication of the vacuum pump and the shaft seals.

2.5.4 Bearing construction

The bearing construction consists of 2 angular contact ball bearings combined with a cylindrical bearing. The bearings are grease lubricated. The angular contact bearings are mounted in a adjusting sleeve, with which the entire pump shaft can be shifted in order to adjust the axial tolerance of the pump wheel.

2.6 Application area

The application area globally looks as follows:

	Maximum value
Capacity	500 m^3/h
Discharge head	100 m
System pressure	10 bar
Temperature	80°C

However, the maximum allowable pressures and temperatures depend strongly on the selected materials and components. Also working conditions may cause differences.

2.7 Re-use

The pump may only be used for other applications after prior consultation with Johnson Pump or your supplier. Since the lastly pumped medium is not always known, the following instructions should be observed:

- Flush the pump properly
- Make sure the flushing liquid is discharged safely (environment!)

⚠ ***Take adequate precautions and use the appropriate personal protection means (rubber gloves, spectacles)!***

2.8 Scrapping

If it has been decided to scrap a pump, the same procedure as for paragraph 2.7 "Re-use" should be followed.

3 Installation

3.1 Safety

- Read this manual carefully before installing and commissioning the pump. Non-observance of these instructions may cause serious damage to the pump that is not covered by our guarantee terms. Follow the instructions step by step.
- Make sure the motor cannot be started when work is done to the pump-motor combination and running parts are insufficiently shielded.
- The pumps are suitable for liquids with a temperature up to 80°C. As from 70°C the user, when installing the pump unit, should take appropriate protection and warning measures to prevent contact with hot pump parts.
- If danger arises in case of static electricity, the entire pump unit should be earthed properly.
- If there is a danger that the pumped liquid might be harmful to men or the environment, the user should take appropriate measures for safe drainage. Also possible leakage fluid from the shaft seal should be safely discharged.

3.2 Conservation

To prevent corrosion, the pump is flushed with a preserving agent before leaving the works. Before putting the pump into operation, drain off any preservative agent and flush the pump thoroughly with hot water.

3.3 Environment

- The foundation must be hard, level and flat.
- The area in which the pump unit is to be placed should be adequately ventilated. A too high ambient temperature and air humidity, as well as a dusty environment may have a negative effect on the functioning of the motor.
- Around the pump unit there should be enough space to operate and if necessary repair the pump
- Behind the cooling air inlet of the motor there should be a free area of at least 1/4 of the electric motor diameter, to ensure unobstructed air supply.

3.4 Mounting

3.4.1 Installation of a pump unit

Pump and motor shafts of complete pump units are adjusted perfectly in line in the works.

1 In case of permanent arrangement place the base plate level on the foundation with the aid of shims.

2 Carefully tighten the nuts on the foundation bolts.

3 Check the alignment of pump and motor shafts and if necessary realign, see paragraph 3.4.3 "Alignment of the coupling".

3.4.2 Assembling a pump unit

If the pump and the electric motor still have to be assembled, do the following:

1 Fit both halves of the coupling to the pump shaft and the motor shaft respectively.

2 If size **db** of the pump, see figure 30, is not equal to the IEC size of the motor, level up the difference by placing properly sized spacers under the pump or under the motor feet.

3 Place the pump on the base plate. Fix the pump to the base plate.

4 Place the electric motor on the base plate. Move the motor to obtain a gap of 3 mm between both coupling halves.

5 Place copper shims under the feet of the electric motor. Fix the electric motor to the base plate.

6 Align the coupling in accordance with the following instructions.

3.4.3 Alignment of the coupling

1 Place a ruler (A) on the coupling. Place or remove as many copper shims as is necessary to bring the electric motor to the correct height so that the straight edge touches both coupling halves over the entire length, see figure 3.

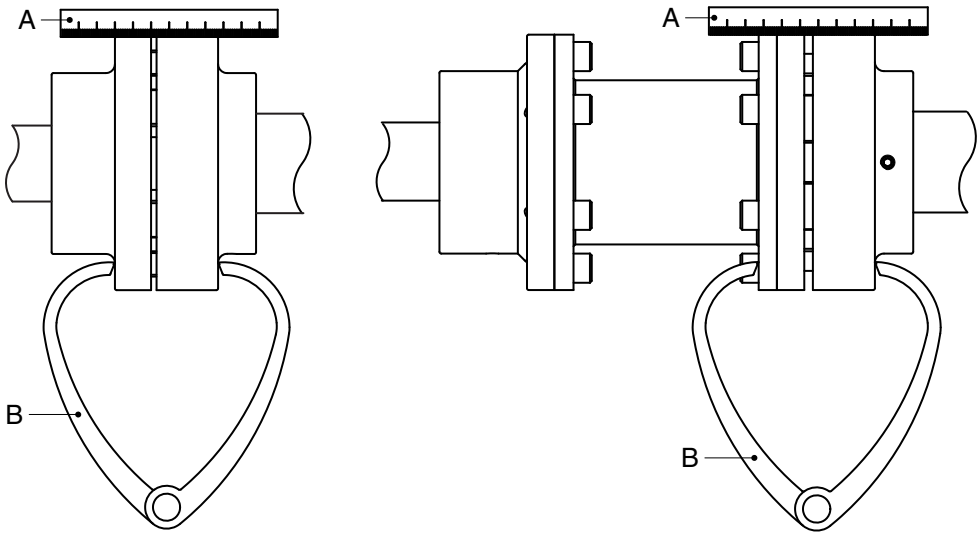

Figure 3: Aligning the coupling by means of a ruler and a pair of outside calipers.

2 Repeat the same check on both sides of the coupling at the height of the shaft. Move the electric motor so that the straight edge touches both coupling halves over the entire length.

3 Check the alignment once again using a pair of external callipers (B) at 2 diametrical opposite points on the sides of the coupling halves, see figure 3.

4 Fit the guard. See paragraph 7.6.4 "Assembling the guard".

3.4.4 Tolerances for aligning the coupling

The maximum allowable tolerances for the alignment of the coupling halves are shown in Table 1. See also figure 4.

Table 1: Alignment tolerances

External diameter of coupling [mm]	V				Va_{max} - Va_{min} [mm]	Vr_{max} [mm]
	min [mm]		max [mm]			
81-95	2	5*	4	6*	0,15	0,15
96-110	2	5*	4	6*	0,18	0,18
111-130	2	5*	4	6*	0,21	0,21
131-140	2	5*	4	6*	0,24	0,24
141-160	2	6*	6	7*	0,27	0,27
161-180	2	6*	6	7*	0,30	0,30
181-200	2	6*	6	7*	0,34	0,34
201-225	2	6*	6	7*	0,38	0,38

*) = coupling with spacer

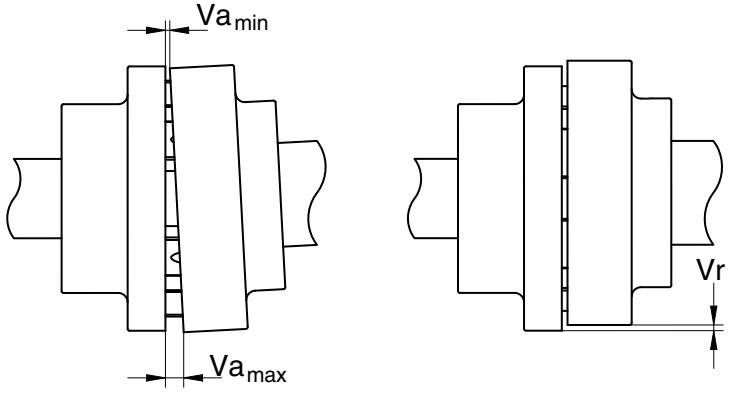

Figure 4: Alignment tolerances standard coupling.

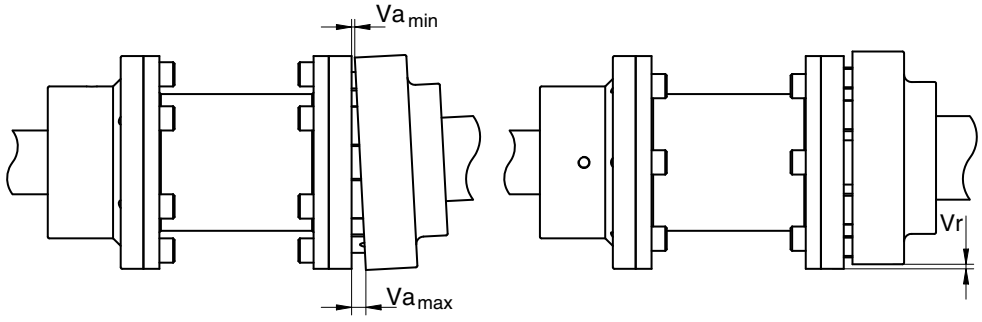

figure 5: Alignment tolerances spacer coupling.

3.5 Piping

- The piping to the suction and delivery connections must fit exactly and must not be subject to stress during operation. For the maximum allowable forces and moments on the pump flanges see paragraph 10.4 "Permissible forces and moments on the flanges".
- The passage of the suction pipe must be amply dimensioned. This pipe should be as short as possible and run towards the pump in such a way that no air pockets can arise. If this is not possible, a venting facility should be provided at the highest point of the pipe. If the inside diameter of the suction pipe is larger than the suction connection of the pump, an eccentric reducer should be applied to prevent air pockets and whirls. See figure 6.

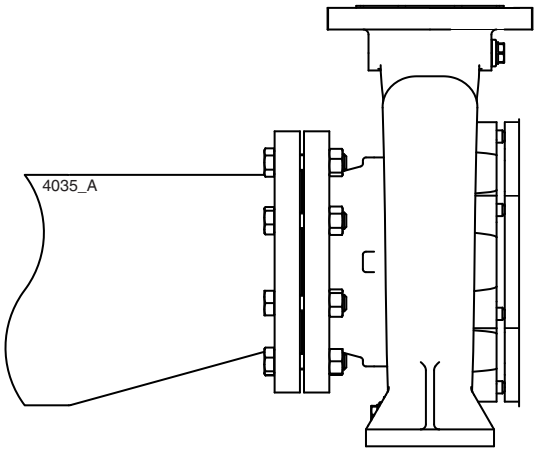

Figure 6: Eccentric reducer to suction flange.

- The maximum allowable system pressure is stated in paragraph 10.4 "Maximum allowable working pressures". If there is a risk that this pressure might be exceeded, for instance because of an excessive inlet pressure, appropriate measures should be taken by mounting a safety valve in the piping.
- Sudden changes in the rate of flow can lead to high pressure impulses in the pump and the piping (water shock). Therefore, do not use quick-acting closing devices, valves etc.

3.6 Mounting accessories centrifugal pump

- It is recommended to always mount a check valve and a shut-off valve in the suction pipe, as close as possible to the pump. If there is no check valve, the pump can only be started with closed delivery valve.
- In case of possible pre-pressure on the suction side, mount a shut-off valve in the suction pipe.
- If necessary, mount a foot valve at the bottom of the suction pipe. Combine this foot valve with a suction strainer to prevent impurities from being drawn in.
- When mounting, place temporarily (for the first 24 operating hours) a fine gauze between suction flange and suction pipe so as to prevent internal pump parts from being damaged by foreign matter. If the risk of damage continues to exist, mount a permanent filter.
- Mount any parts that may have been supplied separately.

3.7 Vacuum pump with service liquid tank

3.7.1 Mounting of accessories

- Connect a pipe to the overflow of the service liquid tank to discharge excess service liquid and extracted air.
- The pump is supplied with the exhaust pipe connected to the pump cover.

3.7.2 Connection diagram with service liquid tank

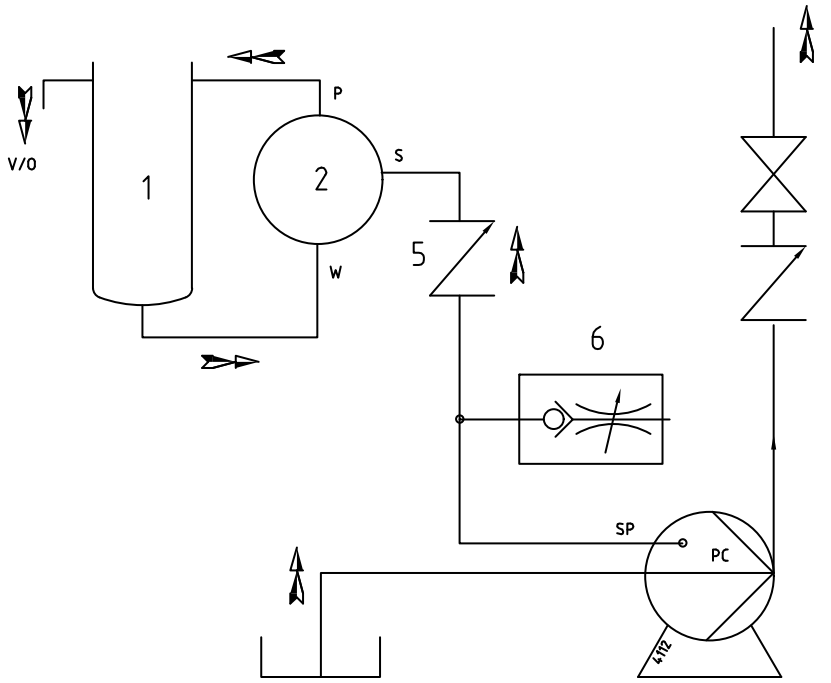

Figure 7: Connection diagram with service liquid tank.

3.7.3 Indication of connections

The suction, delivery and service liquid connections of the vacuum pump are indicated both on the drawings and on the vacuum pump by the letters **S, P** and **W**. Suction point **PC** is the connection to the space behind the impeller.

Indications used in figure 7 through figure 11:

V/O	Venting / Overflow
S	Inlet vacuum pump
SP	Exhaust pipe
P	Outlet vacuum pump
W	Service liquid
PC	Pump connection (=air-extraction connection centrifugal pump)
SF	Filter in suction pipe (only in figure 9)
SC	Suction flange connection
1	Service liquid tank
2	Vacuum pump
5	Check valve
6	Air inlet valve

3.7.4 Installation examples with service liquid tank

For a few situations is shown how pumps with a service liquid tank can be installed.

! **Excess service liquid must always be discharged to the suction tank separately.**

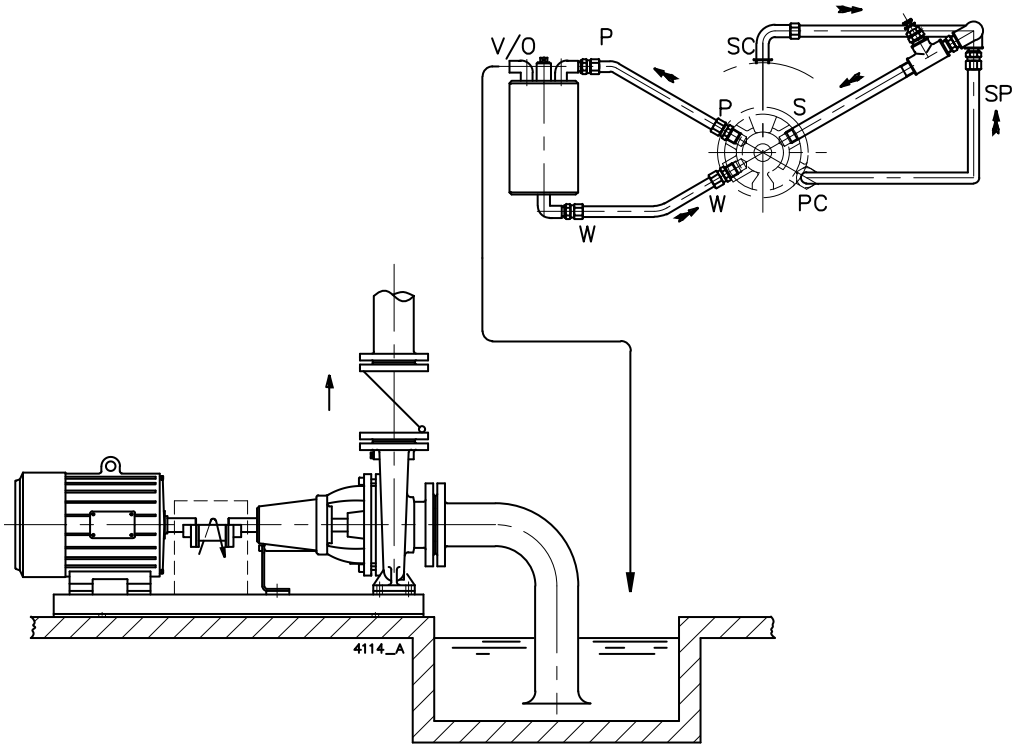

Figure 8: Medium: thin, clean and slightly polluted liquids.

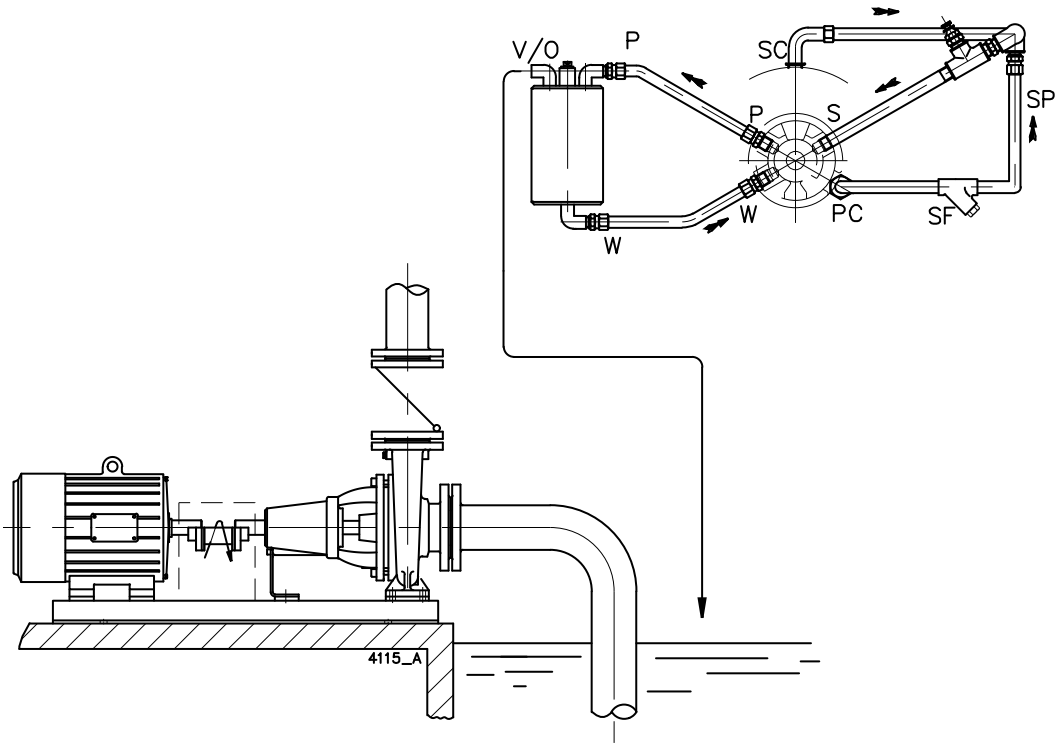

Figure 9: Medium: thin liquids, polluted with highly abrasive constituents. The back blades on the centrifugal impeller prevent heavy abrasive matter from getting into the suction space behind the impeller. To prevent floating abrasive matter from penetrating the pump, mount a filter in the suction pipe. The straining capacity of the filter should correspond with the nature of the pollutants. If necessary, mount several filters with different sieve sizes behind each other. Use at least one filter with Rp 3/4" connections and a sieve size of 0,6 mm.

! **Clean the filters regularly.**

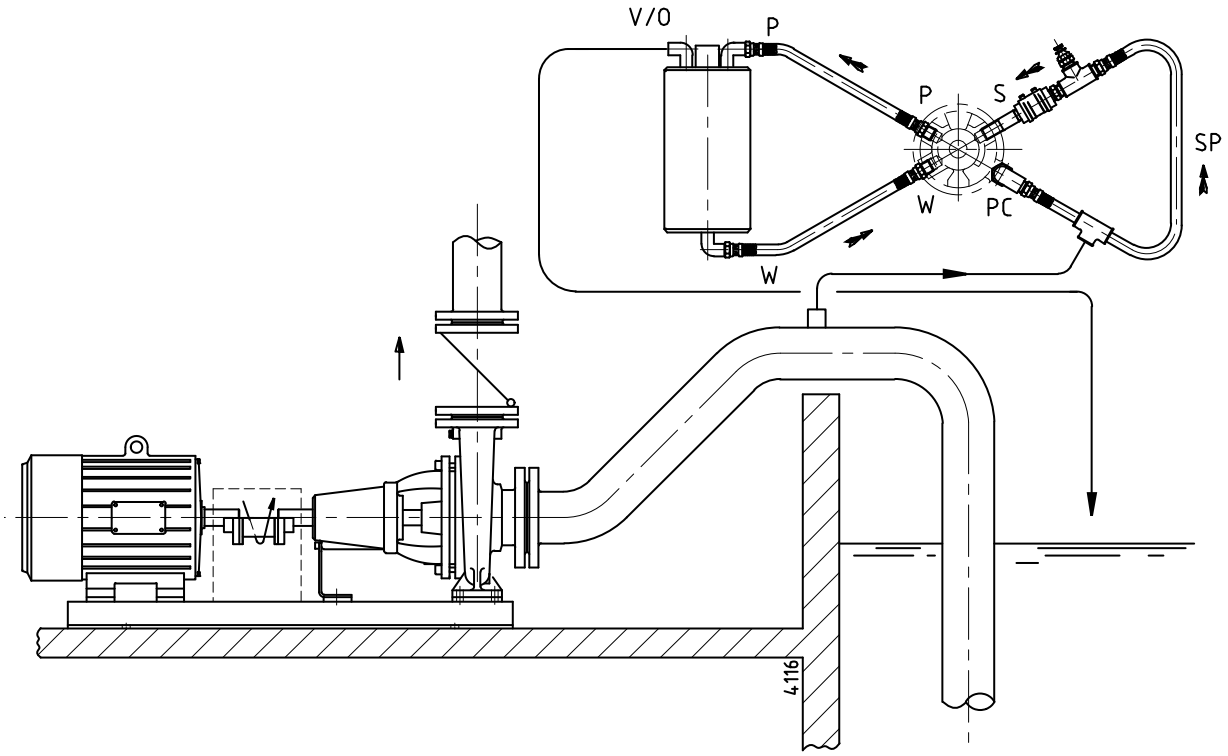

Figure 10: Medium: thin, clean and slightly polluted liquids. In case part of the suction pipe lies higher than the pump, venting should also be provided in this part. If the suction pipe is short, or the lift in the suction pipe small, venting at the highest point is not necessary. However, the suction time will be longer.

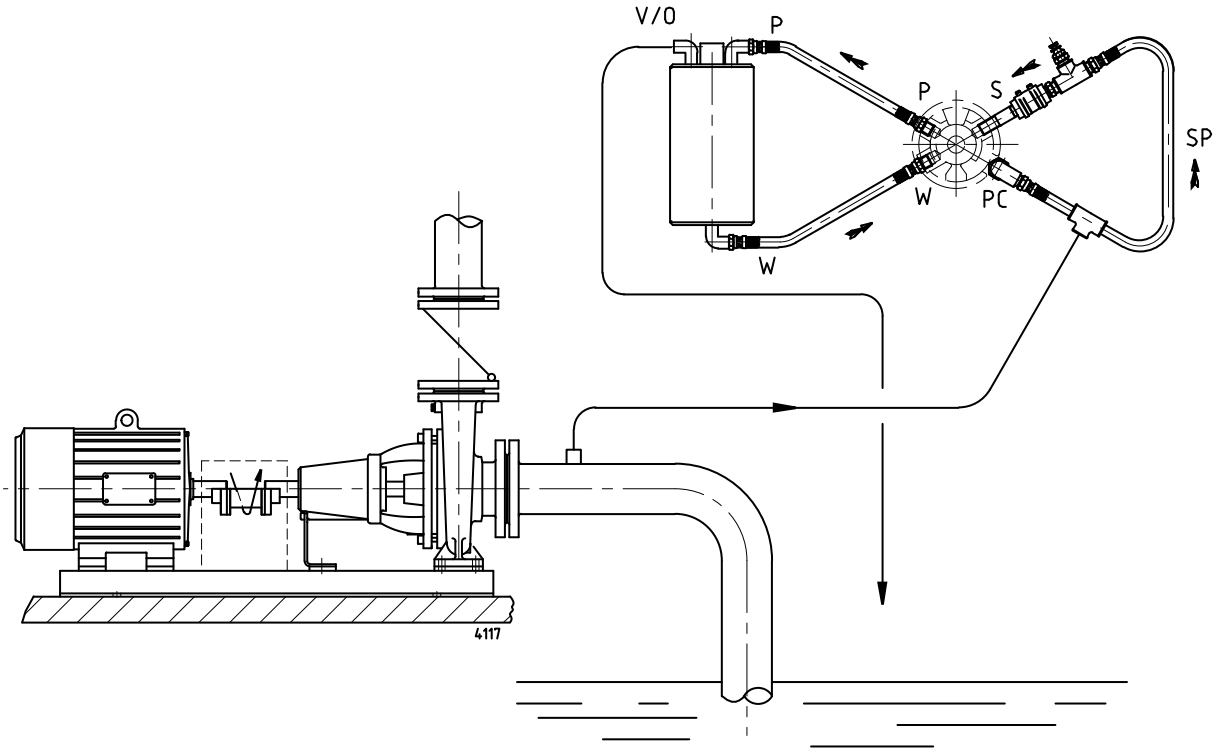

Figure 11: Medium: thin, clean and slightly polluted liquids. In case of long suction pipes (10 m or more) and a high suction head (4-7 m), also the suction pipe must be vented.

3.8 Vacuum pump with float-controlled de-aerator

3.8.1 Mounting of accessories

- Connect the exhaust pipe of the float-controlled de-aerator to the suction pipe. The passage of the exhaust pipe must be approx. 12 mm and the connection to the suction pipe at least G1/2".
- The pump is supplied with the exhaust pipe connected to the pump cover.

3.8.2 Connection diagram with float-controlled de-aerator

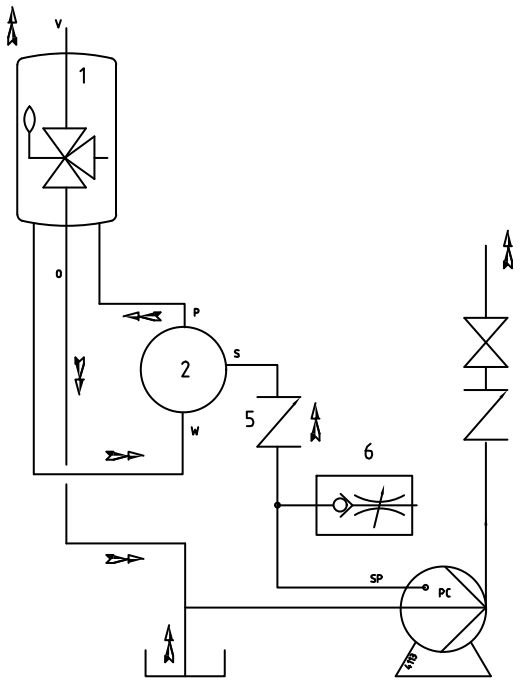

Figure 12: Connection diagram with float-controlled de-aerator.

3.8.3 Indication of connections

The suction, delivery and service liquid connections of the vacuum pump are indicated both on the drawings and on the vacuum pump by the letters **S, P** and **W**.
Suction point **PC** is the connection to the space behind the impeller.

Indications used in figure 12 through figure 16:

V/O	Venting / Overflow
S	Inlet vacuum pump
SP	Exhaust pipe
P	Outlet vacuum pump
W	Service liquid
PC	Pump connection (=air-extraction connection centrifugal pump)
SF	Filter in exhaust pipe (only in figure 14)
SC	Suction flange connection
1	Float-controlled de-aerator
2	Vacuum pump
5	Check valve
6	Air inlet valve

3.8.4 Installation examples with float-controlled de-aerator

For a few situations is shown how pumps with a float-controlled de-aerator can be installed.

! The excess service liquid is always returned to the suction pipe.

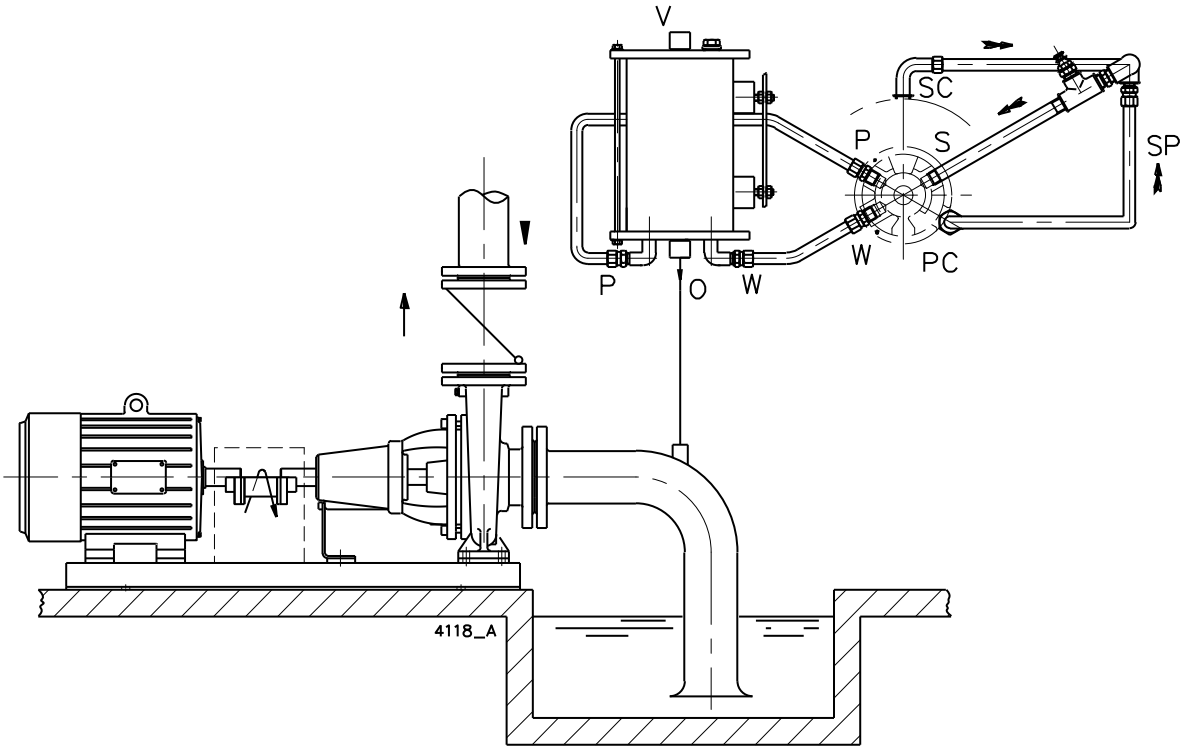

Figure 13: Medium: thin, clean and slightly polluted liquids.

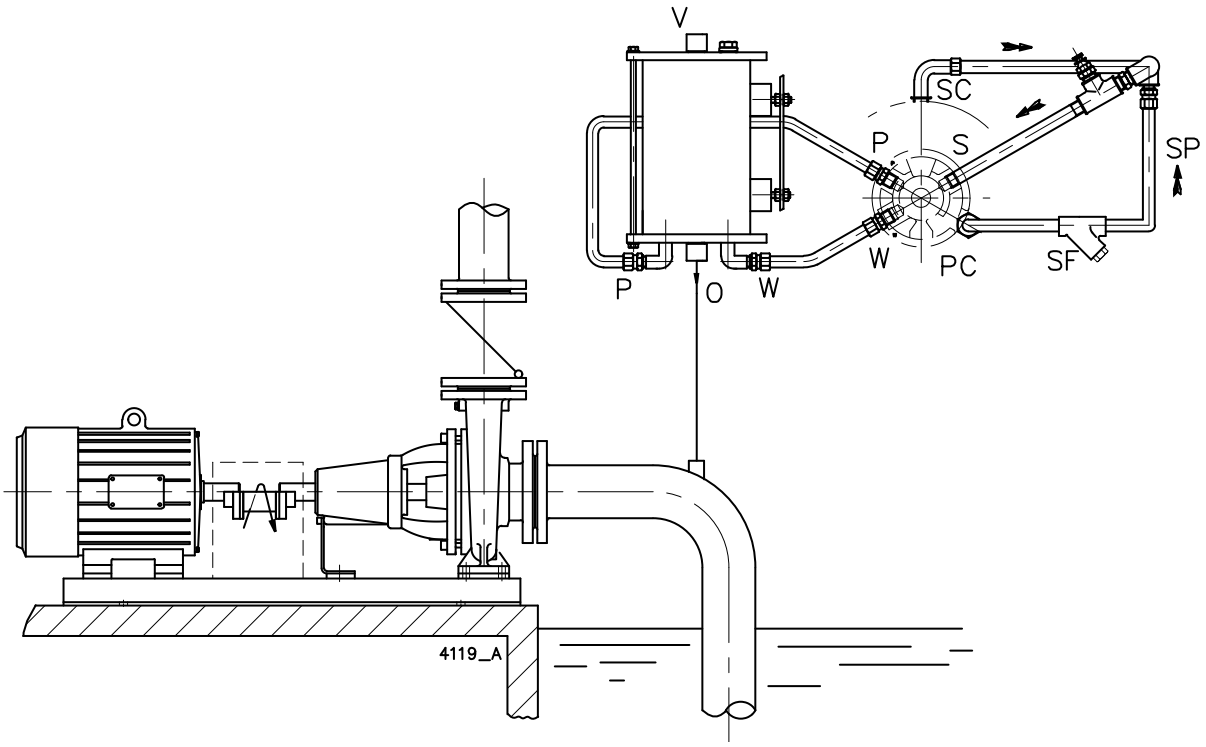

Figure 14: Medium: : thin liquids polluted with highly abrasive matter. The back blades on the centrifugal impeller prevent heavy abrasive matter from getting into the suction space behind the impeller. To prevent floating abrasive matter from penetrating the pump, mount a filter in the suction pipe. The straining capacity of the filter should correspond with the nature of the pollutant. If necessary, mount several filters with different sieve sizes behind each other. Use at least one filter with Rp 3/4" connections and a sieve size of 0,6 mm.

! Clean the filters regularly.

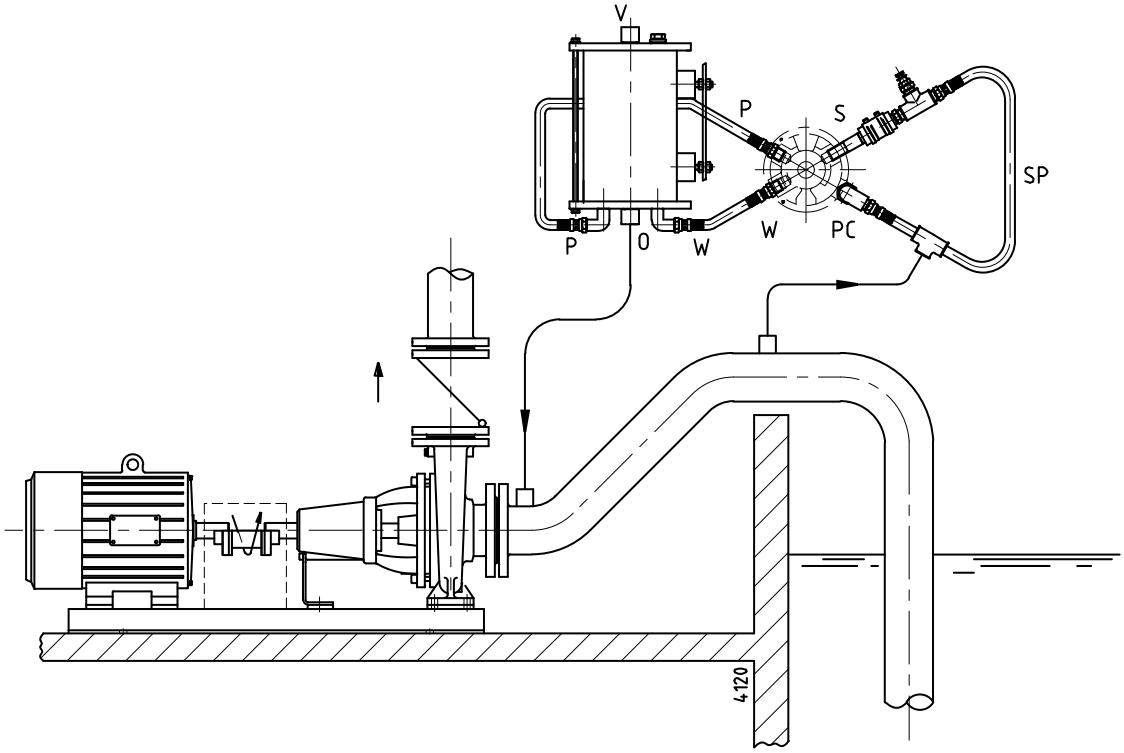

Figure 15: Medium: thin, clean and slightly polluted liquids. In case part of the suction pipe lies higher than the pump, venting should also be provided in this part. If the suction pipe is short, or the lift in the suction pipe small, venting at the highest point is not necessary. However, the suction time will be longer.

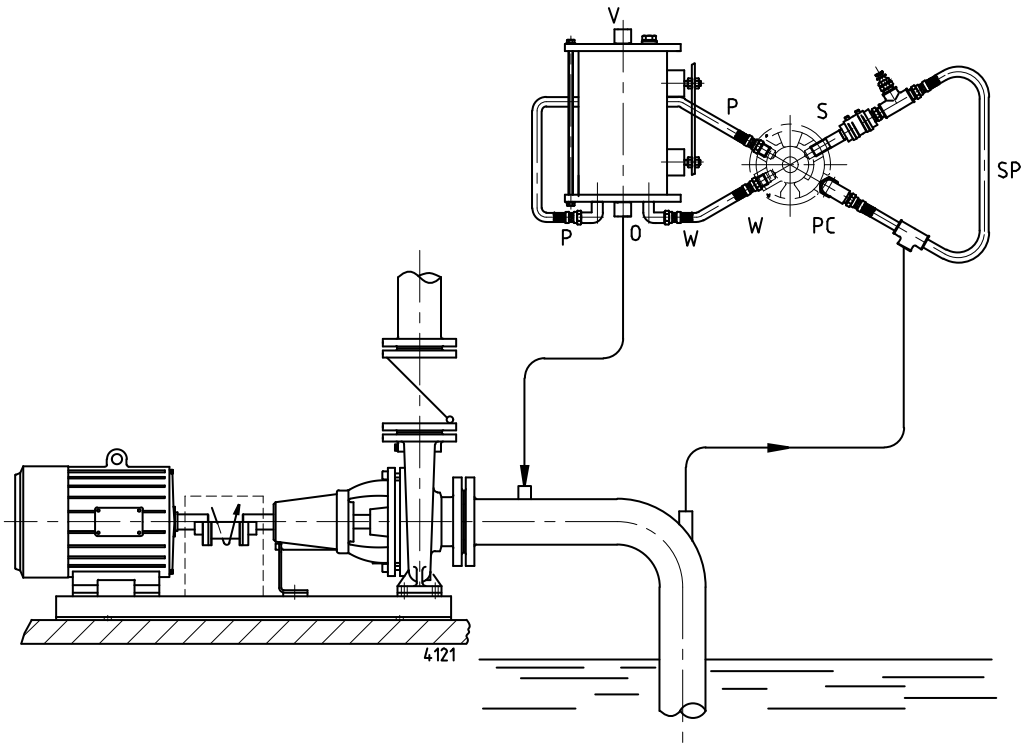

Figure 16: Medium: thin, clean and slightly polluted liquids. In case of long suction pipes (10 m or more) and a high suction head (4 -7 m), also the suction pipe must be vented.

3.9 Connection of the electric motor

⚠ ***The electric motor must be connected to the mains by an approved electrician, according to the locally prevailing regulations of the electricity company.***

- Refer to the instruction manual belonging to the electric motor.
- If possible, mount a working switch as close as possible to the pump.

3.10 Combustion engine

3.10.1 Safety

If the pump set is designed with a combustion engine, the manual for the engine should be included in the delivery. If the manual is missing we urgently request you to contact us immediately. Irrespective of the manual, the following points should be observed for all combustion engines:

- Comply with the local safety regulations.
- The exhaust of combustion gases must be screened off to prevent incidental contact.
- The starting device should automatically be disengaged after the engine has been started.
- The maximum speed of the engine set by us should not be changed.
- Before starting the engine check the oil level.

3.10.2 Sense of rotation

The sense of rotation of combustion engine and pump is indicated by means of an arrow on the combustion engine and the pump casing. Verify whether the sense of rotation of the combustion engine is the same as that of the pump.

4 Commissioning

4.1 Control centrifugal pump part

Check whether the shaft turns freely. Do this by turning the shaft end at the coupling a few times by hand.

4.2 Control vacuum pump part

1 Check whether all piping between the pump wheel casing and the service liquid tank (version TL) or the float-controlled de-aerator (version VL) have been connected.

2 Fill the service liquid tank or the float-controlled de-aerator with liquid and close them with plug (1690) or (3013) respectively.

4.3 Control motor

If driven by an electric motor:

- Check whether the fuses have been mounted.

If driven by a combustion engine:

- Check whether the room in which the engine is placed is well ventilated.
- Check whether the exhaust of the engine is not obstructed.
- Before starting the engine check the oil level.

⚠ ***Never turn the engine in a closed room.***

4.4 Checking the sense of rotation

⚠ ***Beware of possible non-screened running parts!***

1 The sense of rotation of the pump is indicated by an arrow on the pump casing.

2 Let the motor run for a short time and check whether the sense of rotation of the motor corresponds with that of the pump.

3 If the sense of rotation is not correct, alter the sense of rotation. See the the instructions in the user manual belonging to the electric motor.

4 Mount the protective cover.

4.5 Starting the pump

Proceed as follows, both when the pump is put into operation for the first time and when it is re-mounted after repairs.

1 Close the air-inlet valve (1650).

2 Fully open the stop valve in the suction pipe. Close the delivery stop valve.

3 Start the pump.

4 As soon as the pump is under pressure, open the delivery stop valve slowly until the working pressure has been attained.

⚠ ***Make sure that when a pump is running, rotating parts are always properly screened off by the protective screens!***

4.6 Adjusting the air-inlet valve

The air-inlet valve (1650) serves to admit small quantities of air into the self- priming system. The vacuum pump has been designed to pump a large quantity of air. After the suction phase, the vacuum pump functions as liquid pump. However, in principle it is not designed to only pump liquid. By adding a small quantity of air through the air-inlet valve, it is possible to avoid problems. After the pump has been started with closed air-inlet valve, the valve is adjusted as follows:

1 When the suction phase is over and the centrifugal pump maintains the liquid flow on its own, the pump will start making a crackling noise.

2 Slowly open the air-inlet valve until the crackling stops.

3 Leave the valve in this position and secure it with a lock nut. The valve is now properly adjusted. Provided the system conditions do not change, the pump can be reconnected after a break without having to readjust the valve.

4.7 Mechanical seal

The mechanical seals nor the lip seals may never show any visible leakage.

4.8 Check

If a pump is in operation pay attention to the following:

- The pump may never run without liquid in the service liquid tank or the float-controlled de-aerator.
- Never use a stop valve in the suction pipe to control pump capacity. The stop valve should always be fully opened during operation.
- Check whether the absolute inlet pressure is sufficient, so that no vapour can be formed.
- Check whether the pressure difference between suction and delivery pressure corresponds with the specifications for the duty point of the pump.

4.9 Noise

The noise production of a CombiPrime H pump depends to a great extent on the operating conditions. The values stated in paragraph 10.6 "Noise data" are based on normal operation of the pump, driven by an electric motor. In case the pump is used outside the normal operation area, as well as in case of cavitation, the noise level may exceed 85 dB(A). In that case precautions should be taken, like building a noise-barrier around the unit or wearing hearing protection.

5 Maintenance

5.1 Daily maintenance

Regularly check the outlet pressure.

⚠ ***No water should get into the terminal box of the electric motor when the pump room is sprayed clean! Never spray water on hot pump parts! The sudden cooling down may cause them to burst and hot water may flow out!***

5.2 Service liquid

After the pump has been put into operation once, the working-liquid tank and the float-controlled de-aerator don't have to be filled up again: there is constantly a sufficient quantity of pumped liquid in the working-liquid tank and the float- controlled de-aerator.

5.3 Shaft sealing

5.3.1 Mechanical seal

A mechanical seal generally requires no maintenance, however, **it should never be allowed to run dry**. If there are no problems it is not advisable to dismantle the seal. As the facing surfaces are running in on one another. Dismantling always means replacement of the mechanical seal. When the mechanical seal is leaking it has to be replaced.

5.3.2 Lip seal

The lip seals generally require no maintenance. The lip seals run around stainless steel shaft sleeves which are provided with a hard wearing

layer. The space between the lip seals is filled with grease when they are mounted, so as to limit wearing to a minimum. When the lip seals are leaking they have to be replaced.

5.4 Lubrication of the bearings

The bearings have to be re-greased after every 1000 hours of operation. The bearings are greased before delivery. In case the pump is overhauled, the bearings and the bearing house have to be cleaned and provided with new grease. See paragraph 10.1 "Recommended greases" for recommended greases and quantities to be applied.

5.5 Environmental influences

- Regularly clean the filter in the suction pipe or the suction strainer at the bottom of the suction pipe, as the inlet pressure may become too low if the filter or the suction strainer is fouled.
- If there is a risk that the pumped liquid expands during solidification or freezing, the pump has to be drained and, if necessary, flushed after it has been put out of service.
- If the pump is out of service for a long time, it has to be preserved.

5.6 Noise

If, after some time, the pump starts making noise this may indicate that something is wrong with the pump unit. For instance, a crackling noise can indicate cavitation or an excessively noise motor can indicate deterioration of the bearings.

5.7 Faults

⚠ ***The pump, of which you want to determine the fault, may be hot or under pressure. Take the appropriate precautions first and protect yourself with the proper safety devices (safety goggles, gloves, protective clothing)!***

To determine the source of the malfunctioning of the pump, proceed as follows:

1 Switch off the current supply to the pump unit. Block the working switch with a lock or remove the fuse. In case of a combustion engine: switch off the engine and close the fuel supply to the engine.

2 Close the stop valves.

3 Determine the nature of the fault.

4 Try to determine the cause of the fault and take the appropriate measures, see chapter 6,
or:
Contact your installer!

6 Cause of failures

In general, failures in a pump unit are attributable to the following causes:

1 Failures in the pump

2 Failures or faults in the piping system

3 Failures due to wrong installation or commissioning

4 Failures due to a wrong pump selection.

A number of the most frequently occurring failures as well as their possible causes are set forth in the table below.

Most frequently occurring failures	Possible causes
Pump doesn't deliver any liquid	1 4 8 9 10 11 13 14 17 19 20 21 29
The volume flow of the pump is insufficient	2 3 4 8 9 10 11 13 14 15 17 19 20 21 28 29 44
The discharge head of the pump is insufficient	2 4 13 14 17 19 28 29
Pump stalls after it has been put into operation	1 8 9 10 11
The power consumption of the pump is higher than normal	12 15 16 17 18 22 23 24 25 26 27 32 34 38 39
The power consumption of the pump is lower than normal	3 14 15 16 17 18 20 21 28 29 44
Mechanical seals have to be replaced to often	23 25 26 30 32 33 34
Pump vibrates or makes noise	9 10 11 15 18 19 20 22 23 24 25 26 27 29 37 38 39 40 43
Bearings wear too soon or get hot	23 24 25 26 27 37 38 39 40 42
Pump runs with difficulty gets hot or stuck	23 24 25 26 27 34 37 38 39 40 42

	Possible causes
1	Service liquid tank or float de-aerator not filled with liquid
2	Gas or air coming from the liquid
3	Air lock in the suction pipe
4	Suction pipe leaks air
8	The manometric suction head is too high
9	Suction pipe or suction strainer is blocked
10	Insufficient immersion of foot valve or suction pipe during operation of the pump
11	NPSH available too low
12	Speed too high
13	Speed too low
14	Wrong sense of rotation
15	Pump doesn't work at the right duty point
16	Liquid density differs from the calculated liquid density
17	Liquid viscosity differs from the calculated liquid viscosity
18	Pump works when the liquid flow is too low
19	Wrong pump selection
20	Obstruction in impeller or pump housing
21	Obstruction in the piping
22	Wrong installation of the pump unit
23	Pump and motor not well aligned
24	Rotating part running out of true
25	Imbalance in rotating parts e.g. impeller pump shaft coupling
26	Pump shaft is running out of true
27	Bearings faulty or worn out
28	Sealing rings faulty or worn out
29	Damaged impeller
30	Running surfaces of the mechanical seals
32	Bad mounting of the mechanical seals or of the lip seals
33	Mechanical seals or lip seals not suitable for the operation liquid or operation circumstances
34	Pump wheel cover not perpendicularly mounted
37	Axial retaining of impeller or pump shaft is defective
38	The bearings have been mounted wrongly
39	Too much or too little bearing lubrication
40	Wrong or polluted lubricant
42	Too high axial force because of worn dorsal blades or excessive inlet pressure
43	Air-inlet valve closed
44	Air-inlet valve opened too much

7 Disassembly and assembly

7.1 Precautionary measures

⚠ ***Take adequate measures to avoid that the motor is started while you are working on the pump. This is especially important for electric motors with remote control:***

- Switch the operating switch near the pump (if available) to "OFF".
- Switch off the pump switch on the switchboard.
- If necessary remove the fuses.
- Hang a danger board near the switchboard cabinet.

7.2 Tools

Assembly and disassembly work requires no special tools. However such tools can make certain jobs easier, for instance replacing the shaft seal. If such is the case it will be indicated in the text.

7.3 Liquid draining

Drain the pump through drain plug (0310). If applicable, close all valves in the suction and delivery piping and in the flushing and cooling pipe to the shaft seal. Also drain the self-priming section by disconnecting the piping P, S and W.

If the pump processes harmful liquids, take the following precautionary measures:

- Wear protective gloves, glasses, etc..
- Flush the pump properly.
- Make sure no liquid gets into the environment.
- Then put the drain plug back.

7.4 Item numbers

If no specific figure numbers are stated, then the item numbers used in these instructions refer to the cross section drawings and parts lists, which can be found in chapter 9.

The connection markings P, S and W on the self-priming section are explained in paragraph 3.7.3 "Indication of connections" for the Service liquid tank configuration TL or paragraph 3.8.3 "Indication of connections" for the Float Deaerator configuration VL.

7.5 Construction variants

The pumps are supplied in 2 construction variants and with 2 processing liquid devices. The variants have a special code, which is stated in the type designation on the type plate on the pump.

M2	mechanical shaft seals on shaft sleeves
M4	lip seals on hardened shaft sleeves
TL	processing liquid tank and air-inlet valve
VL	float-operated de-aerator and air-inlet valve

7.6 Back Pull Out system

CombiPrime H pumps have a Back Pull Out system. If the pump unit is designed with a spacer-coupling, just remove the spacer. After that the bearing bracket with the entire rotating part can be removed. This means that almost the whole pump can be dismantled without having to detach the suction and delivery piping. The motor remains in its position. If the pump unit doesn't have a spacer coupling, the motor has to be removed from the foundation before disassembly.

7.6.1 Disassembly coupling guard

1 Loosen bolts (0230) and nuts (0231) and remove these including washers (0232) and (0233). See figure 20.

2 Remove both jackets (0270). See figure 18.

3 Mounted with spacer coupling: Remove the spacer. Else: Remove the electric motor.

7.6.2 Disassembly Back Pull Out unit

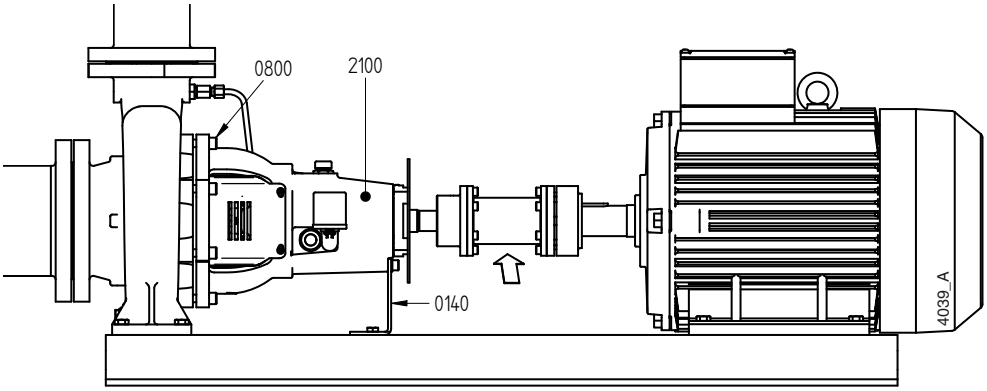

Figure 17: Back-Pull-Out principle.

1 Disconnect the connections S, P and W from the pump wheel casing.

2 Loosen the bracket support (0140) from the base plate, see figure 17.

3 Remove the Allen screws (0800).

4 Pull the entire bearing bracket (2100) from the pump casing. The entire bearing bracket of large pumps is very heavy. Support it with a beam or hang it in a pulley sling.

7.6.3 Assembly Back Pull Out unit

1 Mount a new gasket for the pump casing (0300) and mount the entire bearing bracket back into the pump casing. Tighten the Allen screws (0800) crosswise.

2 Reconnect the connections S, P and W to the pump wheel casing.

3 Fix the bearing support on the foundation.

4 Mount the assembly plate (0275) to the adjusting bush (2240) with bolts (0235). See figure 21.

5 Mount the coupling key (2210) and mount the coupling half onto the pump shaft.

6 Place the motor back in its place or mount the spacer of the spacer coupling.

7 Check the alignment of pump and motor shaft, see paragraph 3.4.3 "Alignment of the coupling". If necessary, realign.

7.6.4 Assembling the guard

1 Mount the jacket (0270) at motor side. The annular groove must be located at motor side. .

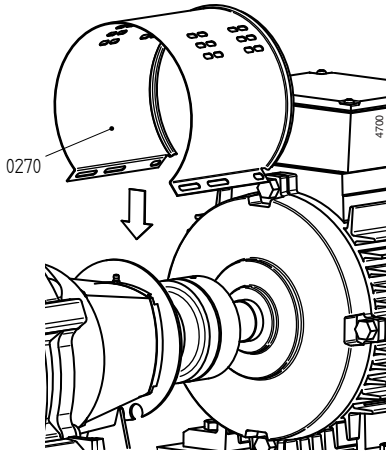

Figure 18: Fitting jacket at motor side.

2 Place the assembly plate (0280) over the motor shaft and fit it into the annular groove of the jacket.

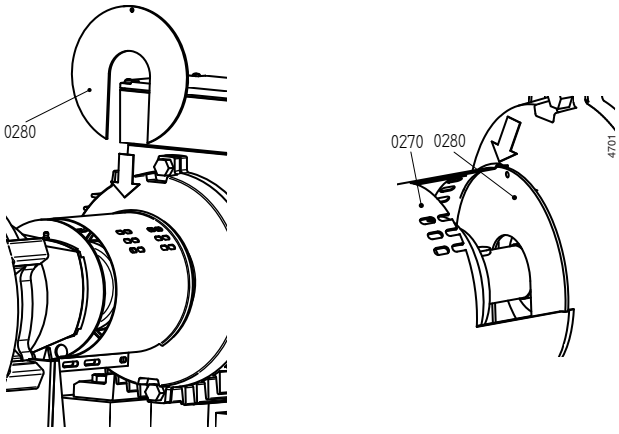

Figure 19: Fitting assembly plate at motor side.

3 Close the jacket and fit a bolt (0230) and nut (0231) with washers (0232) and (0233) into the hole at motor side. See figure 20 for the proper mounting sequence..

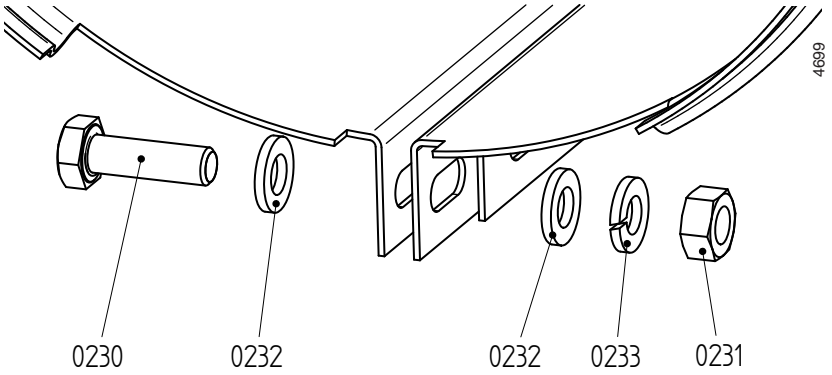

Figure 20: Fitting bolt and nut with washers and spring washer.

4 Mount the jacket (0270) at pump side. Place it over the present jacket at motor side. The annular groove must be located at pump side..

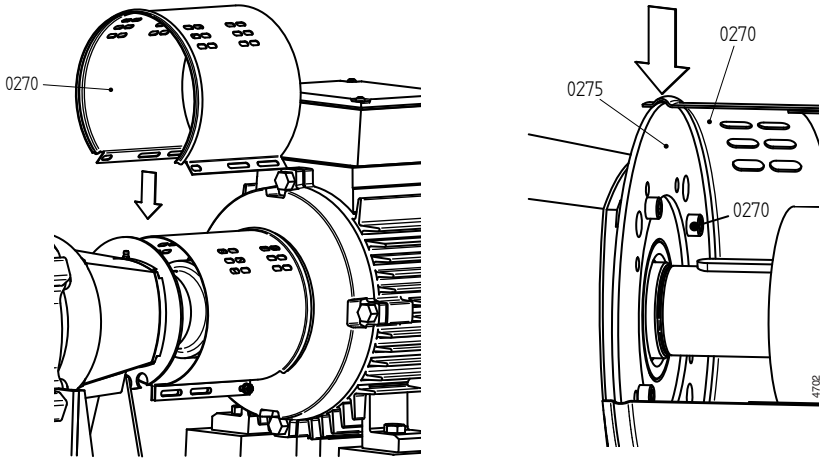

Figure 21: Fitting jacket at pump side.

5 Close the jacket and fit a bolt (0230) and nut (0231) with washers (0232) and (0233) into the hole at pump side. See figure 20 for the proper mounting sequence.

6 Slide the jacket at motor side towards the motor as far as possible. Fix both jackets with bolt (0230) and nut (0231) with washers (0232) and (0233) fitted into the overlapping slot holes..

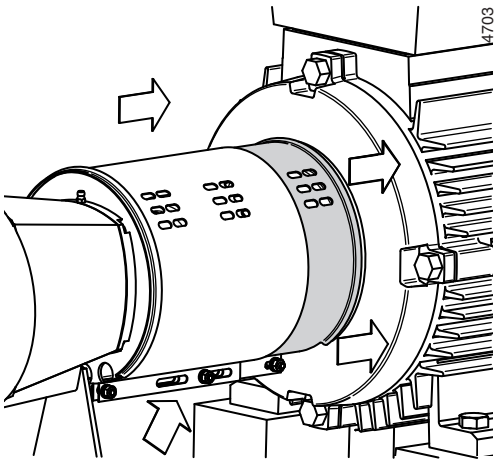

Figure 22: Adjusting jacket at motor side.

7.7 Replacement of impeller and wear ring

The play between the impeller and the wear ring is 0,3 mm to the diameter at delivery. In case the play has increased to 0,5-0,7m due to wearing, the impeller and the wear ring should be replaced.

7.7.1 Disassembly of the impeller

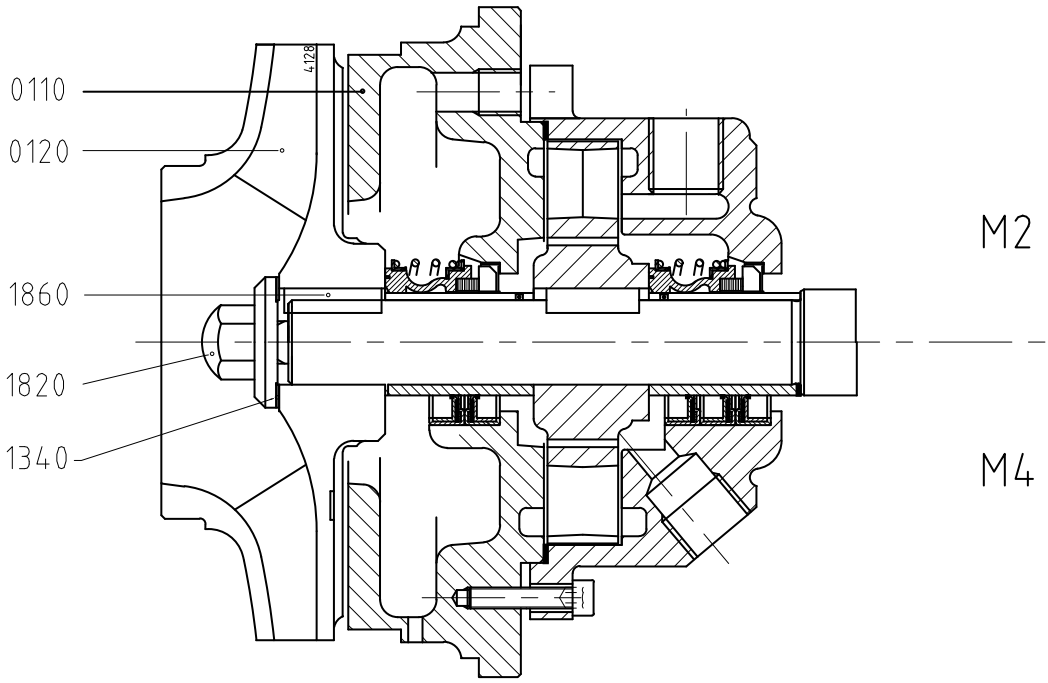

Figuur 23: Disassembling the impeller.

The item numbers used are referring to figure 23.

1 Remove the Back Pull Out unit, see paragraph 7.6.2 "Disassembly Back Pull Out unit".
2 Remove the impeller cap nut (1820) with the gasket (1340). Sometimes the nut has to be heated to break the Loctite-contact.
3 Remove the impeller (0120) with a pulley puller or wrest the impeller loose by inserting for instance 2 big screwdrivers between the impeller and the pump cover (0110).
4 Remove the impeller key (1860).
5 Remove the gasket (1940).

7.7.2 Assembly of the impeller

1 Mount the gasket (1940).
2 Place the impeller key in the key way of the pump shaft.
3 Push the impeller onto the pump shaft against the gasket (1940).
4 Degrease the thread on the pump shaft and the thread in the impeller nut.
5 Put a drop of Loctite 243 on the thread and mount the gasket (1340) and the impeller cap nut (1820). For tightening moment of the nut see the table in paragraph 10.3.2 "Tightening moments for cap nuts".
6 Mount the Back Pull Out unit, see paragraph 7.6.3 "Assembly Back Pull Out unit".

7.7.3 Disassembly of the wear ring

This only concerns bearing groups 2 and 3, except for types CH 40-250 and CH 50-250.

After removing the Back-Pull-Out unit the wear ring can be removed. In most cases the ring has been fixed so tightly that it cannot be removed undamaged.

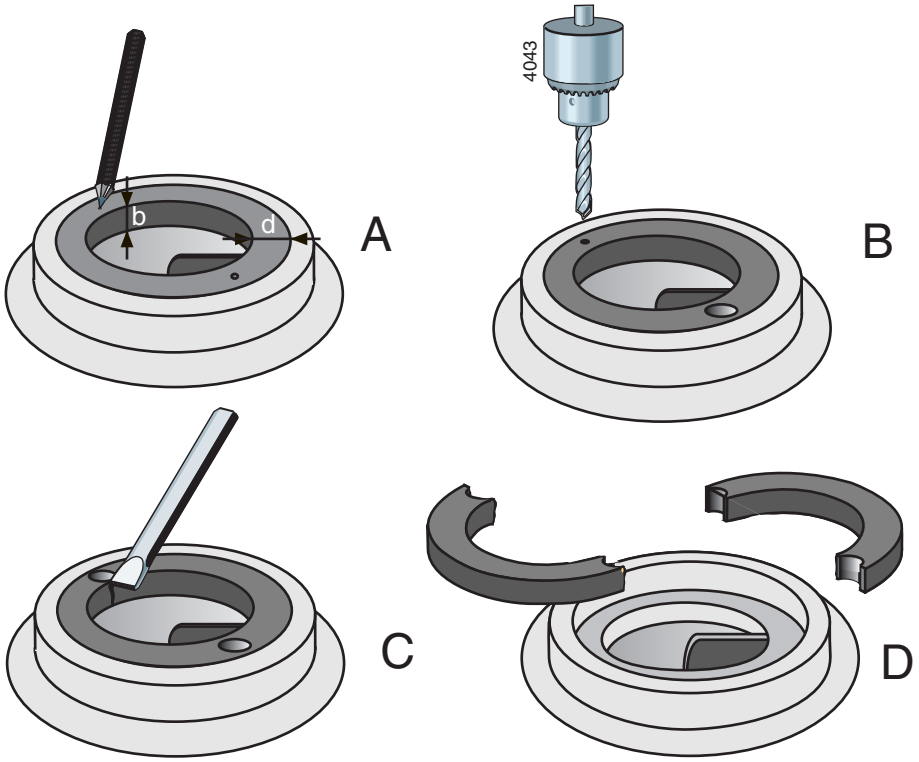

Figure 24: Removal of wear ring.

1 Measure the thickness (d) and the width (b) of the ring, see figure 24 A.

2 Make a centre hole in the middle of the edge of the ring at two opposite points, see figure 24 B.

3 Use a drill with a diameter just a little bit smaller than the thickness (d) of the ring and drill two holes in the ring, see figure 24 C. Don't drill deeper than the width (b) of the ring. Take care not to damage the fitting edge of the pump casing.

4 Use a chisel to cut the remaining part of the ring thickness. Now you can remove the ring in two parts from the pump casing, see figure 24 D.

5 Clean the pump casing and carefully remove all bore dust and metal splinters.

7.7.4 Assembling the wear ring

1 Clean and degrease the fitting edge of the pump casing where the wear ring is to be mounted.

2 Degrease the outer edge of the wear ring and put a few drops of Loctite 641 on it.

3 Fit the wear ring in the pump casing. **Take care it is not pushed out of alignment!**

7.8 Shaft sealing

7.8.1 Disassembly of the mechanical seals M2

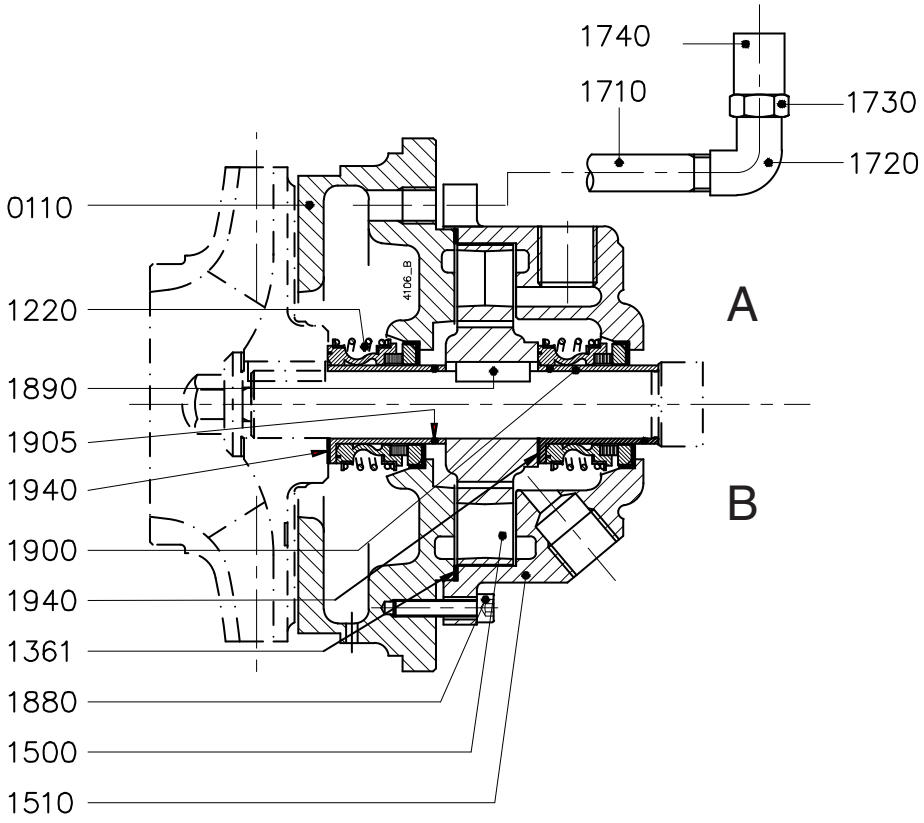

Figure 25: Mechanical seal M2 (A = bearing group 1 and 2, B = bearing group 3).

The item numbers used are referring to figure 25.

1 Disassemble the impeller, see paragraph 7.7.1 "Disassembly of the impeller".

2 Pull the shaft sleeve (1900) off the pump shaft and remove the rotating part of the mechanical seal from the shaft sleeve.
Bearing group 3 only: Remove gasket (1940).

3 Mark the position of the pump cover (0110) in relation to the bearing bracket (2100).

4 Loosen the Allen screws (1880).

5 Push the cover of the pump wheel casing (1510) backward.

6 Knock the pump cover loose and push it off the pump shaft. Press the counter-ring of the mechanical seal out of it.

7 Pull the pump wheel (1500) from the pump shaft and remove the key (1890).

8 Pull the shaft sleeve (1900) from the pump shaft and remove the rotating part of the mechanical seal from the shaft sleeve.
Bearing group 3 only: Remove gasket (1940).

9 Push the cover of the pump wheel casing (1510) off the pump shaft and press the counter-ring out.

10 Remove gasket (1361).

11 Remove O-rings (1905) out of the shaft sleeves (1900).

7.8.2 Assembly of the mechanical seals M2

- A mechanical seal is a fragile precision part. Leave the seal in its original packing until you are ready to mount it!
- Clean all receiving parts properly.
- Make sure your hands and working environment are clean!
- **Never touch the sliding surfaces with ones fingers!**
- Never put the rings down on their sliding surfaces!

1 Check the shaft sleeves (1900) and the splash ring (2220) for damages. Also, the splash ring should clasp the shaft well. If necessary replace these parts.

2 Place the bearing bracket with the shaft upright.

3 Place the cover of the pump wheel casing (1510) and the pump cover (0110) flat down and press the counter-rings of the shaft seals straight into the. If necessary use a plastic pressure piece. Never knock them inside! The maximum axial turn of the counter-ring is 0,1 mm.

4 Put some glycerine or silicon grease on the O-rings and mount the O-rings into the shaft sleeves.

5 Push the cover of the pump wheel casing (1510) over the pump shaft.

6 Wet the clean shaft sleeve with some low-surface-tension water (add detergent), feed the bellows with a slight twist in clockwise direction onto the shaft sleeve. **Use no oil or grease!** Apply pressure only on the corner rings.

7 Push a shaft sleeve (1900) on the pump shaft.

8 Bearing group 3 only: Fit a new gasket (1940).

9 Place the key (1890) in the pump shaft and push the pump wheel (1500) over the pump shaft.

10 Mount the gasket (1361).

11 Mount the pump cover (0110) in the right position into the fitting edge of the bearing bracket. Check whether the pump cover is at right angles to the pump shaft.

12 Mount the cover of the pump wheel casing (1510) against the pump cover. Watch its position in view of the connections. Tighten the Allen screws (1880) crosswise. **The cover should not be oblique.**

13 Push the other shaft sleeve (1900) on the pump shaft.

14 Bearing group 3 only: Fit a new gasket (1940).

15 Mount the impeller and other parts, see paragraph 7.7.2 "Assembly of the impeller".

7.8.3 Disassembly of the lip seals M4

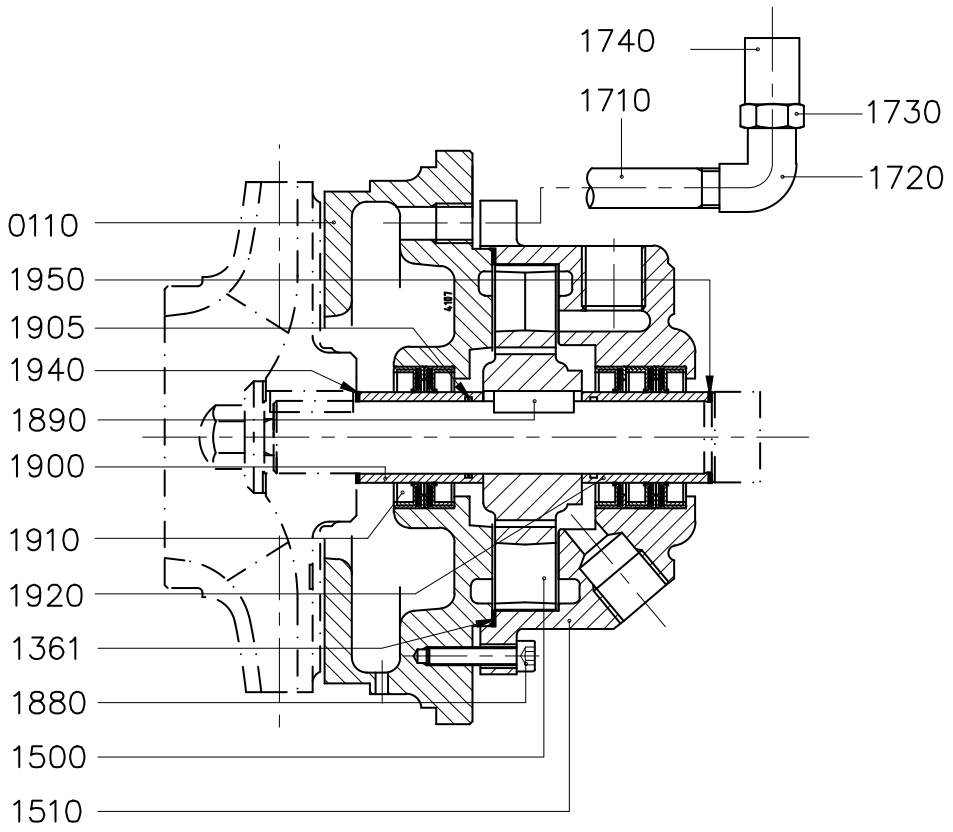

Figure 26: Lip seal M4.

The item numbers used are referring to figure 26.

1 Disassemble the impeller, see paragraph 7.7.1 "Disassembly of the impeller".
2 Mark the position of the pump cover (0110) in relation to the bearing bracket (2100).
3 Loosen the Allen screws (1880).
4 Push the cover of the pump wheel casing (1510) backward.
5 Knock the pump cover loose and push it off the pump shaft. Remove the tabbed sealing rings (1910).
6 Pull the shaft sleeve (1900) from the pump shaft and remove the O-ring (1905).
7 Pull the pump wheel (1500) from the pump shaft and remove the sunk key (1890).
8 Slide the cover of the pump wheel casing (1510) off the pump shaft and remove the tabbed sealing rings.
9 Remove the gasket (1361).
10 Pull the shaft sleeve (1920) from the pump shaft.
11 Remove the gasket (1950) from the pump shaft.

7.8.4 Assembly of the lip seals M4

- A lip seal is a fragile precision part, leave the seal in its original packing until you are ready to mount it.
- Clean all receiving parts properly.
- Make sure your hands and working environment are clean!

1 Check the shaft sleeves (1900 and 1920) and the splash ring (2220) for damages. Also, the splash ring should clasp the shaft properly. If necessary, replace these parts.

2 Place the bearing bracket with the shaft upright.

3 Mount the gasket (1950) around the pump shaft.

4 Slide the cover of the pump wheel casing (1510) onto the pump shaft.

5 Mount a lip seal on both ends of the shaft sleeve. The pointing direction of the tab should be opposite to the sliding direction. Shaft sleeve (1900) will have 2 lip seals, shaft sleeve (1920) will have 3. **When being mounted, the lip seals and the space between them both must be filled with grease.**

6 Slide the shaft sleeve (1920) onto the pump shaft.

7 Mount the sunk key (1890) in the pump shaft and slide the pump wheel casing (1500) onto the pump shaft.

8 Mount the pump cover (0110) in the right position in the fitting edge of the bearing bracket. Check the position of the pump cover. It should be at right angles to the pump shaft.

9 Mount the gasket (1361) between the pump cover and the pump wheel casing.

10 Mount the cover of the pump wheel casing (1510) against the pump cover. Watch the position in view of the place for the connections. Tighten the Allen screws (1880) crosswise. The cover should not be oblique.

11 Mount the O-ring (1905) into the shaft sleeve (1900) and slide the shaft sleeve onto the pump shaft.

12 Mount the impeller and the other parts, see paragraph 7.7.2 "Assembly of the impeller".

7.9 Bearing

7.9.1 Disassembly of bearings and pump shaft

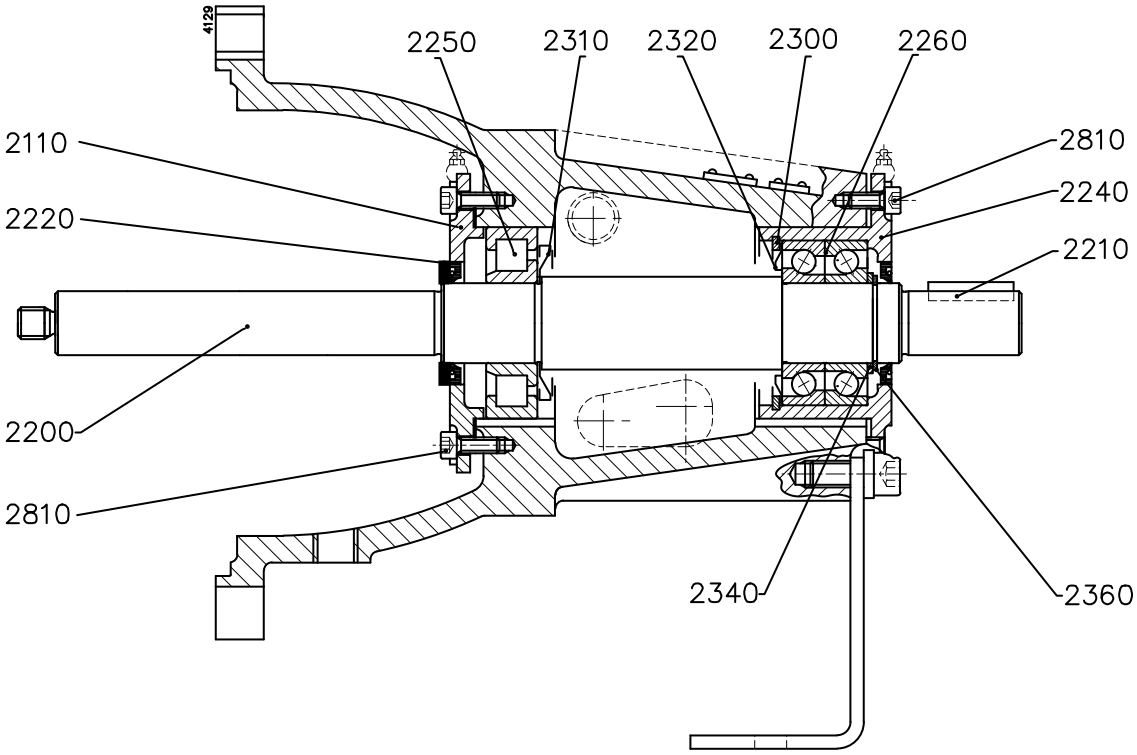

Figure 27: Bearing.

The item numbers used are referring to figure 27.

1 Disassemble the impeller and the shaft seal, see paragraph 7.7.1 "Disassembly of the impeller" and paragraph 7.8.1 "Disassembly of the mechanical seals M2" / paragraph 7.8.3 "Disassembly of the lip seals M4".

2 Remove the coupling guard, see paragraph 7.6.1 "Disassembly coupling guard".

3 Remove the splash ring (2220).

4 Remove the Allen screws (2810) and the bearing cover (2110).

5 Knock the pump shaft (2200) on impeller side until the adjusting bush (2240) with the bearings (2260) comes out of the bearing bracket. Use a plastic hammer so as to avoid damage to the thread. Remove the pump shaft with the bearings from the bearing bracket.

6 Remove the coupling with a coupling puller and remove the coupling key (2210).

7 Loosen bolts (0235) and remove the assembly plate (0275).

8 Remove the inner circlip (2300) and pull the adjusting bush (2240) off the bearings.

9 Remove the outer circlip (2360) and the adjusting ring (2340) and pull the bearings from the pump shaft with a suitable puller. If such a puller is not available, knock the inner raceway of the bearing carefully. Use a normal hammer and a soft-metal drift. **Never knock with a hammer directly on the bearing!**

10 Remove the Nilos rings (2310 and 2320).

7.9.2 Assembly of bearings and pump shaft

! **Make sure your working environment is clean and leave the bearings in their original packing until you are ready to mount them.**

1 Clean the inside of the bearing bracket well.

2 Mount the Nilos rings (2310 and 2320) on the pump shaft. Make sure they are in the right place and position.

3 If possible, preheat the bearings to 90°C before mounting them on the pump shaft. The cylindrical bearing (2250) is to be mounted on the impeller side. The two angular contact bearings are mounted on the driving side **in O-arrangement**. Make sure all bearings are mounted straight on the pump shaft.

! **If preheating is not possible: never knock directly on the bearing! Use a mounting bush which is positioned against the inner raceway of the bearing and a normal hammer. A soft hammer may loose splinters which might damage the bearing.**

4 Mount the adjusting ring (2340) and mount the outer circlip (2360).

5 Grease the bearings. See paragraph 10.1 "Recommended greases" for recommended grease types.

6 Press the adjusting bush (2240) over the two angular contact bearings and place the inner circlip (2300) in the adjusting bush. Make sure the inner circlip falls into the groove.

7 Mount the shaft with the bearings into the bearing bracket from the motor side. Knock the shaft end on the coupling side until the first bearing (2250) slides through the bearing boring.

8 Carefully knock the shaft further into the bearing bracket until the adjusting bush (2240) is completely inside the bearing block. The shaft with the bearings should enter straight into the bearing bracket.

9 Mount the bearing cover (2110) and the splash ring (2220).

10 Mount the set screws (1930) and the Allen screws (2810) and adjust the axial play as described in 7.9.

11 Mount the self-priming part and the impeller as described in paragraph 7.8 "Shaft sealing" and paragraph 7.7.2 "Assembly of the impeller".

7.10 Adjustment of the axial play

After repairs to the pump, the axial play of the pump wheel has to be adjusted. This play should be the same on both sides. To adjust the play proceed as follows, see figure 28:

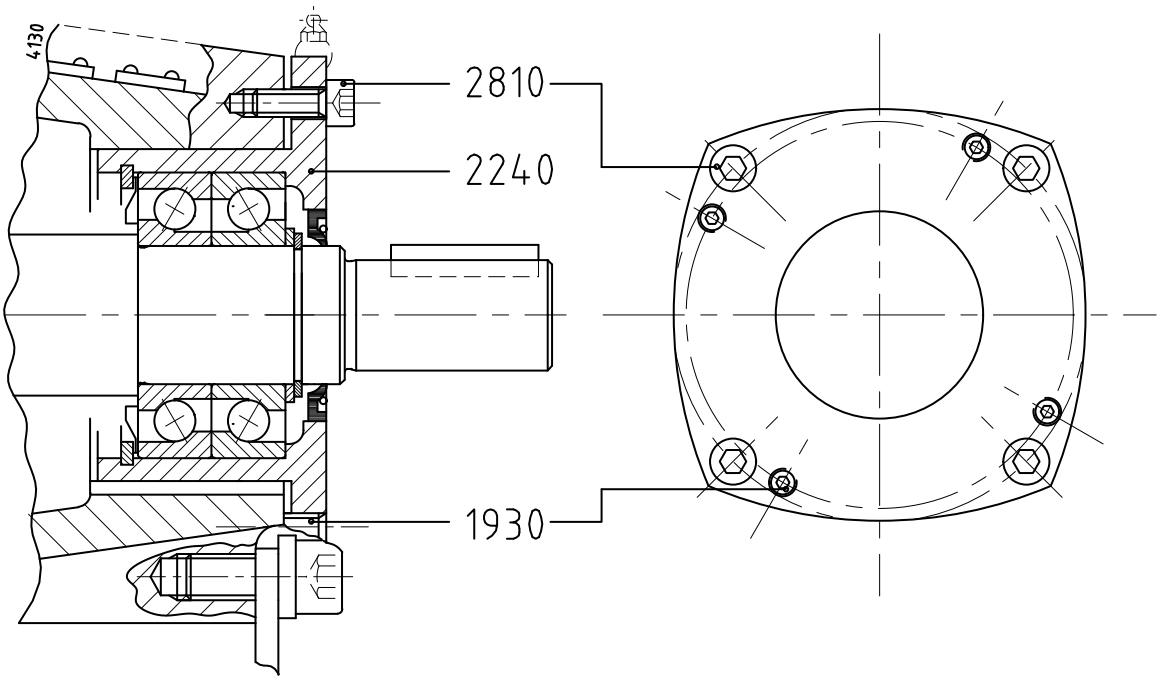

Figure 28: Adjustment of the axial play.

1 Loosen the set screws (1930).

2 Tighten the Allen screws (2810) crosswise. The adjusting bush (2240) with the bearing, pump shaft and pump wheel is shifting to the left. Turn the pump shaft by hand whilst tightening the screws. Tighten the Allen screws until you feel that the pump wheel starts to drag.

3 Screw the set screws (1930) sofar into the adjusting bush (2240) until they are just touching the bearing bracket.

4 Then loosen the Allen screws (2810) again.

5 Re-tighten the set screws (1930) crosswise, whilst turning the pump shaft by hand. Count the number of turns you can give the set screws until the pump wheel starts to turn.

6 Then loosen the set screws again by half of the number of tightening turns.

7 Now tighten the Allen screws (2810) properly, crosswise.

8 Verify that all 4 set screws are fixed tightly.

9 Verify that the pump shaft can be turned easily.

➢ *If you wish you can use a clock gauge instead of counting the number of tightening turns of the screws. Determine the position of the shaft end in the two extreme positions of the shaft. Then adjust the shaft end right in the middle of the measured values.*

8 Dimensions

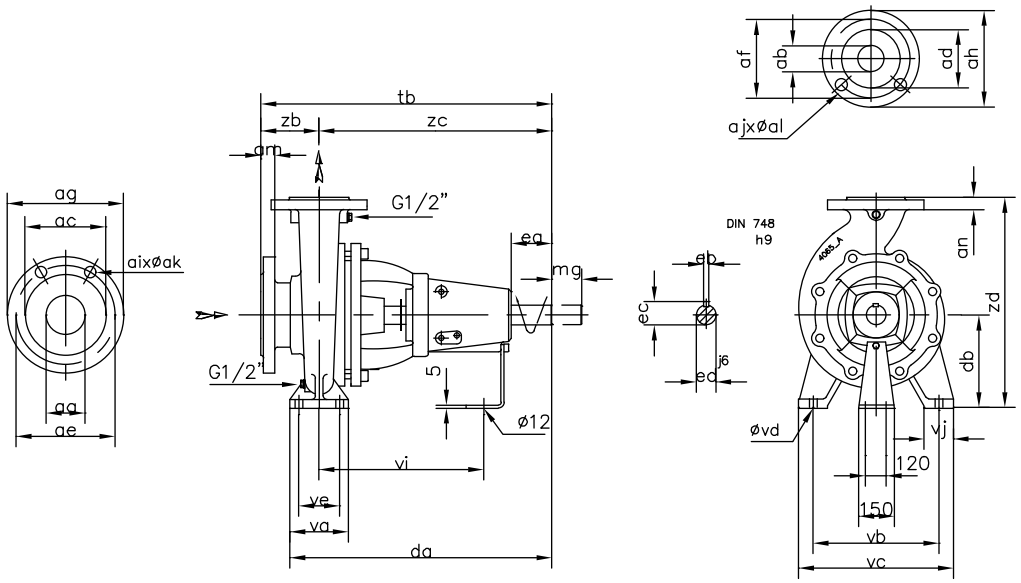

Figure 29: Pump dimensions.

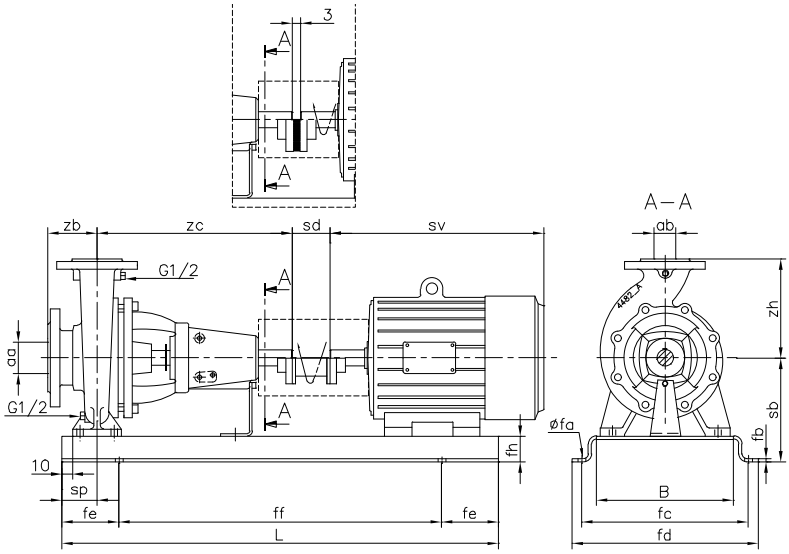

Figure 30: Dimensions pump + electric motor, with spacer-coupling or standard coupling (insert)

8.1 Dimensions pump

See figure 29

ISO 7005 PN 16*					
aa	ac	ae	ag	ai*ak	am
ab	ad	af	ah	aj*al	an
32	78	100	140	4*18	18
40	88	110	150	4*18	18
50	102	125	165	4*18	20
65	122	145	185	4*18	20
80	138	160	200	8*18	22
100	158	180	220	8*18	22
125	188	210	250	8*18	24
150	212	240	285	8*23	24
200	268	295	340	8*23	26

* aa/ab 200 - 250 - 300: ISO 7005 PN10 ISO 7005 DIN 2533/DIN 2532

CH	aa	ab	da	db	ea	eb	ec	ed	mg	tb	va	vb	vc	vd	ve	vf	vi	vj	zb	zc	zd	[kg]
32-160	50	32	410	132	45	8	27	24	100	440	100	190	240	14	70	12	268	50	80	360	292	34
32-200	50	32	410	160	45	8	27	24	100	440	100	190	240	14	70	12	268	50	80	360	340	35
32-250	50	32	533	180	75	10	35	32	100	570	125	250	320	14	95	14	346	65	100	470	405	50
40-160	65	40	410	132	45	8	27	24	100	440	100	190	240	14	70	12	268	50	80	360	292	38
40-200	65	40	410	160	45	8	27	24	100	460	100	212	265	14	70	12	268	50	100	360	340	46
40-250	65	40	533	180	75	10	35	32	100	570	125	250	320	14	95	14	346	65	100	470	405	60
50-160	65	50	410	160	45	8	27	24	100	460	100	212	265	14	70	12	268	50	100	360	340	40
50-200	65	50	410	160	45	8	27	24	100	460	100	212	265	14	70	12	268	50	100	360	360	55
50-250	65	50	533	180	75	10	35	32	100	595	125	250	320	14	95	14	346	65	125	470	405	70
65-160	80	65	423	160	45	8	27	24	100	460	125	212	280	14	95	12	268	65	100	360	360	50
65-200	80	65	423	180	45	8	27	24	140	460	125	250	320	14	95	14	268	65	100	360	405	65
65-250	80	65	550	200	75	10	35	32	140	570	160	280	360	18	120	14	346	80	100	470	450	85
65-315	80	65	610	225	110	12	45	42	140	655	160	315	400	18	120	16	368	80	125	530	505	100
80-160	100	80	423	180	45	8	27	24	140	485	125	250	320	14	95	14	268	65	125	360	405	50
80-200	100	80	533	180	75	10	35	32	140	595	125	280	345	14	95	14	346	65	125	470	430	75
80-250	100	80	550	200	75	10	35	32	140	595	160	315	400	18	120	15	346	80	125	470	480	88
80-315	100	80	610	250	110	12	45	42	140	655	160	315	400	18	120	16	368	80	125	530	565	120
80-400	125	80	610	280	110	12	45	42	140	655	160	355	435	18	120	18	368	80	125	530	635	150
100-125	100	100	423	180	45	8	27	24	100	485	125	250	320	14	95	14	268	65	125	360	430	70
100-160	125	100	550	200	75	10	35	32	100	595	160	280	360	18	120	15	346	80	125	470	515	85
100-200	125	100	550	200	75	10	35	32	140	595	160	280	360	18	120	15	346	80	140	470	480	90
100-250	125	100	550	225	75	10	35	32	140	610	160	315	400	18	120	16	346	80	140	470	505	110
100-315	125	100	610	250	110	12	45	42	140	670	160	315	400	18	120	18	368	80	140	530	565	140
100-400	125	100	630	280	110	12	45	42	140	670	200	400	500	23	150	20	368	100	140	530	635	185
125-250	150	125	550	250	75	10	35	32	140	610	160	315	400	18	120	18	346	80	140	470	605	130
125-315	150	125	630	280	110	12	45	42	140	670	200	400	500	23	150	20	368	100	140	530	635	185
125-400	150	125	630	315	110	12	45	42	140	670	200	400	500	23	150	20	368	100	140	530	715	200
150-315	200	150	630	280	110	12	45	42	140	690	200	450	550	23	150	22	368	100	160	530	680	185
150-400	200	150	630	315	110	12	45	42	140	690	200	450	550	23	150	22	368	100	160	530	765	220
200-200	200	200	570	280	75	10	35	32	100	670	200	400	500	23	150	20	346	100	200	470	680	170

8.2 Dimensions pump and motor with standard coupling

See figure 30.

CH	ISO 7005 PN16 *							IEC motor																
								90	90	100	112	132	132	160	160	180	180	200	225	225	250	280	280
								S	L	L	M	S	M	M	L	M	L	L	S	M	M	S	M
	aa	ab	sp	zb	zc	zh	SV max	300	325	390	425	485	520	630	670	700	735	805	835	860	960	1065	1115
32-160	50	32	60	80	360	160	sb	177	177	177	177	177											
							x	1	1	1	1	1											
32-200	50	32	60	80	360	180	sb			205	205	205		223									
							x			1	1	1		2									
32-250	50	32	72	100	470	225	sb			243	243	243		260	260								
							x			2	2	2		3	3								
40-160	65	40	60	80	360	160	sb		177	177	177	177		223									
							x		1	1	1	1		2									
40-200	65	40	60	100	360	180	sb				205	205		223	223								
							x				1	1		2	2								
40-250	65	40	72	100	470	225	sb			243	243	243		260	260	260							
							x			2	2	2		3	3	3							
50-160	65	50	60	100	360	180	sb		205	205	205	205		223									
							x		1	1	1	1		2									
50-200	65	50	60	100	360	200	sb			205	205	205		223	223	260		290					
							x			1	1	1		2	2	3		4					
50-250	65	50	72	100	470	225	sb			243	243	243	243	260	260	260		290					
							x			2	2	2	2	3	3	3		4					
65-160	80	65	72	100	360	200	sb					205		223	223	260		290					
							x					1		2	2	3		4					
65-200	80	65	72	100	360	225	sb					243		243	243	260		290					
							x					2		2	2	3		4					
65-250	80	65	90	100	470	250	sb			280	280	280	280	280	280	280		290					
							x			3	3	3	3	3	3	3		4					
65-315	80	65	90	125	530	280	sb				315	315	315	315	315	315							
							x				4	4	4	4	4	4							
80-160	100	80	72	125	360	225	sb					243		243	243	260		290					
							x					2		2	2	3		4					
80-200	100	80	72	125	470	250	sb					260		260	260	260		290		315	380	410	
							x					3		3	3	3		4		4	6	6	
80-250	100	80	72	125	470	280	sb				290	290	290	290	290	290		290		315	380	410	
							x				4	4	4	4	4	4		4		4	6	6	
80-315	100	80	90	125	530	315	sb				340	340	340	340	340	340	340	340					
							x				4	4	4	4	4	4	4	4					
80-400	125	80	90	125	530	355	sb						370	370	370	370	370	370					
													4	4	4	4	4	4					
100-125	100	100	72	125	360	250	sb					243		243	243	260		290					
							x					2		2	2	3		4					
100-160	125	100	90	125	470	315	sb							280	280	280		290		315	380		
							x							3	3	3		4		4	6		
100-200	125	100	90	125	470	280	sb								280	280		290		315	380	410	
							x								3	3		4		4	6	6	
100-250	125	100	90	140	470	280	sb				315	315	315	315	315	315		315		315	380	410	410
							x				4	4	4	4	4	4		4		4	6	6	6

CH	ISO 7005 PN16 *							IEC motor														
								90	90	100	112	132	132	160	160	180	180	200	225	225	250	280	280
								S	L	L	M	S	M	M	L	M	L	L	S	M	M	S	M
	aa	ab	sp	zb	zc	zh	SV max	300	325	390	425	485	520	630	670	700	735	805	835	860	960	1065	1115
100-315	125	100	90	140	530	315	sb					340	340	340	340	340	340	340					
							x					4	4	4	4	4	4	4					
100-400	125	100	110	140	530	355	sb					370	370	370	370	370	370	370	410	410	410		
							x					4	4	4	4	4	4	4	6	6	6		
125-250	150	125	90	140	470	355	sb					340	340	340	340	340	340	340					
							x					4	4	4	4	4	4	4					
125-315	150	125	110	140	530	355	sb						370	370	370	370	370	370	410	410	410		
							x						4	4	4	4	4	4	6	6	6		
125-400	150	125	110	140	530	400	sb						405	405	405	405	405	405	445	445	445	445	445
							x						4	4	4	4	4	4	6	6	6	6	6
150-315	200	150	110	160	530	400	sb							410	410	410	410	410	410	410	410	410	410
							x							6	6	6	6	6	6	6	6	6	6
150-400	200	150	110	160	530	450	sb								445	445	445	445	445	445	445	445	445
							x								6	6	6	6	6	6	6	6	6
200-200	200	200	110	200	470	400	sb								370	370	370	370					
							x								4	4	4	4					

* 200 - 250 - 300: aa/ab = ISO 7005 PN10 (ISO 7005 ≈ DIN 2533/DIN 2532)

x = Baseplate number

8.3 Dimensions pump and motor with spacer coupling

See figure 30.

CH	ISO 7005 PN16 *								IEC motor																
									90	90	100	112	132	132	160	160	180	180	200	225	225	250	280	280
									S	L	L	M	S	M	M	L	M	L	L	S	M	M	S	M
	aa	ab	sd	sp	zb	zc	zh	SV max	300	325	390	425	485	520	630	670	700	735	805	835	860	960	1065	1115
32-160	50	32	100	60	80	360	160	sb	177	177	195	195	195											
								x	1	1	2	2	2											
32-200	50	32	100	60	80	360	180	sb			223	223	223		223									
								x			2	2	2		2									
32-250	50	32	100	72	100	470	225	sb			243	243	243		260	260								
								x			2	2	2		3	3								
40-160	65	40	100	60	80	360	160	sb		177	195	195	195		223									
								x		1	2	2	2		2									
40-200	65	40	100	60	100	360	180	sb				223	223		223	240								
								x				2	2		2	3								
40-250	65	40	100	72	100	470	225	sb			243	243	243		260	260	260							
								x			2	2	2		3	3	3							
50-160	65	50	100	60	100	360	180	sb		205	223	223	223		223									
								x		1	2	2	2		2									
50-200	65	50	100	60	100	360	200	sb			223	223	223		223	240	260		290					
								x			2	2	2		2	3	3		4					
50-250	65	50	100	72	100	470	225	sb				243	243	260	260	260	260		290					
								x				2	2	3	3	3	3		4					
65-160	80	65	100	72	100	360	200	sb					223		240	240	260		290					
								x					2		3	3	3		4					
65-200	80	65	140	72	100	360	225	sb					243		260	260	260		290					
								x					2		3	3	3		4					
65-250	80	65	140	90	100	470	250	sb			280	280	280	280	280	280	280		300					
								x			3	3	3	3	3	3	3		5					
65-315	80	65	140	90	125	530	280	sb				315	315	315	315	325	325							
								x				4	4	4	4	5	5							
80-160	100	80	140	72	125	360	225	sb					243		260	260	260		290					
								x					2		3	3	3		4					
80-200	100	80	140	72	125	470	250	sb					260		260	260	260		300		325	380	410	
								x					3		3	3	3		5		5	6	6	
80-250	100	80	140	72	125	470	280	sb				290	290	290	290	290	290		300		325	380	410	
								x				4	4	4	4	4	4		5		5	6	6	
80-315	100	80	140	90	125	530	315	sb				340	340	340	340	350	350	350	350					
								x				4	4	4	4	5	5	5	5					
80-400	125	80	140	90	125	530	355	sb						370	370	380	380	380	380					
														4	4	5	5	5	5					
100-125	100	100	100	72	125	360	250	sb					243		260	260	260		290					
								x					2		3	3	3		4					
100-160	125	100	100	90	125	470	315	sb							280	280	280		300		325	380		
								x							3	3	3		5		5	6		
100-200	125	100	140	90	125	470	280	sb								280	280		300		325	350	410	
								x								3	3		5		5	6	6	
100-250	125	100	140	90	140	470	280	sb				315	315	315	315	315	315		325		325	380	410	410
								x				4	4	4	4	4	4		5		5	6	6	6

CH	ISO 7005 PN16 *								IEC motor															
									90	90	100	112	132	132	160	160	180	180	200	225	225	250	280	280
									S	L	L	M	S	M	M	L	M	L	L	S	M	M	S	M
	aa	ab	sd	sp	zb	zc	zh	SV max	300	325	390	425	485	520	630	670	700	735	805	835	860	960	1065	1115
100-315	125	100	140	90	140	530	315	sb					340	340	340	350	350	350	350					
								x					4	4	4	5	5	5	5					
100-400	125	100	140	110	140	530	355	sb					370	370	410	410	410	410	410	410	410	410		
								x					4	4	6	6	6	6	6	6	6	6		
125-250	150	125	140	90	140	470	355	sb					340	340	340	340	340	350	350					
								x					4	4	4	4	4	5	5					
125-315	150	125	140	110	140	530	355	sb						370	410	410	410	410	410	410	410	410		
								x						4	6	6	6	6	6	6	6	6		
125-400	150	125	140	110	140	530	400	sb						405	445	445	445	445	445	445	445	445	445	445
								x						4	6	6	6	6	6	6	6	6	6	6
150-315	200	150	140	110	160	530	400	sb							410	410	410	410	410	410	410	410	410	410
								x							6	6	6	6	6	6	6	6	6	6
150-400	200	150	140	110	160	530	450	sb								445	445	445	445	445	445	445	445	445
								x								6	6	6	6	6	6	6	6	6
200-200	200	200	140	110	200	470	400	sb								370	410	410	410					
								x								4	6	6	6					

* 200 - 250 - 300: aa/ab = ISO 7005 PN10 (ISO 7005 ≈ DIN 2533/DIN 2532)

x = Baseplate number

8.4 Dimensions baseplate

Baseplate number	[mm]									Weight
	L	B	fa	fb	fc	fd	fe	ff	fh	[kg]
1	800	305	19	6	385	433	120	560	45	20
2	1000	335	19	8	425	473	145	710	63	38
3	1250	375	24	10	485	545	175	900	80	69
4	1250	500	24	10	610	678	175	900	90	79
5	1600	480	24	10	590	658	240	1120	100	107
6	1650	600	24	10	720	788	240	1170	130	129

8.5 Dimensions pump with service liquid tank

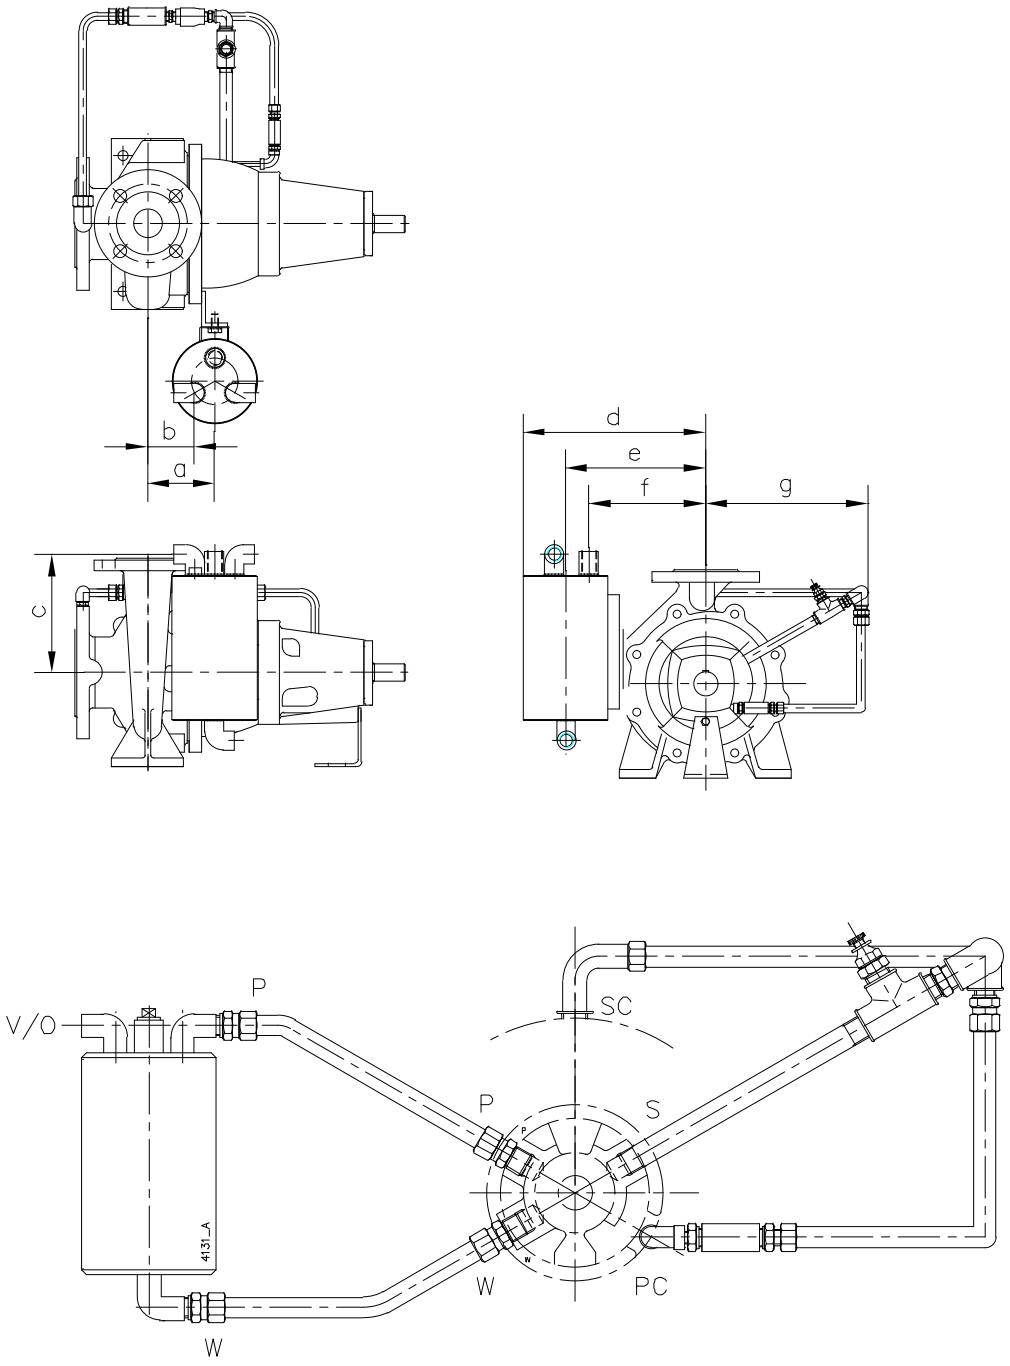

Figure 31: Dimensions pump with service liquid tank.

CH	a	b	c	d	e	f	g*	g**
32-160	94	66	165	275	215	183	200	
32-200	94	66	155	300	240	208	200	
32-250	109	81	165	330	270	238	200	235
40-160	94	66	165	275	215	183	200	
40-200	94	66	155	300	240	208	200	
40-250	109	81	165	330	270	238	200	235
50-160	94	66	165	275	215	183	200	
50-200	94	66	155	300	240	208	200	
50-250	109	81	165	330	270	238	200	235
65-160	94	66	165	275	215	183	200	
65-200	94	66	155	300	240	208	200	
65-250	109	81	165	330	270	238	200	235
65-315	140	112	130	345	285	253		305
80-160	94	66	165	275	215	183	200	
80-200	109	81	155	300	240	208	200	
80-250	109	81	165	330	270	238	200	235
80-315	140	112	130	345	285	253		305
80-400	132	104	130	395	335	303		305
100-125	94	66	165	275	215	183	200	
100-160	109	81	155	300	240	208	200	
100-200	109	81	155	300	240	208	200	
100-250	109	81	165	330	270	238	200	235
100-315	140	112	130	345	285	253		305
100-400	132	104	130	395	335	303		305
125-250	109	81	165	330	270	238		305
125-315	140	112	130	345	285	253		305
125-400	132	104	130	395	335	303		305
150-315	140	112	130	345	285	253		305
150-400	132	104	130	395	335	303		305
200-200	109	81	165	330	270	238		305

* n = 2400 - 3600 min^{-1}

** n = 1450 - 2400 min^{-1}

Connections

V/O	De-aeration / Overflow	Rp½
S	Inlet self-priming pump	Rp½
SP	Air-intake line	Rp½
P	Outlet self-priming pump	Rp½
W	Inlet service liquid	Rp½
SC	Suction flange connection	Rp½

8.6 Dimensions pump with float de-aerator

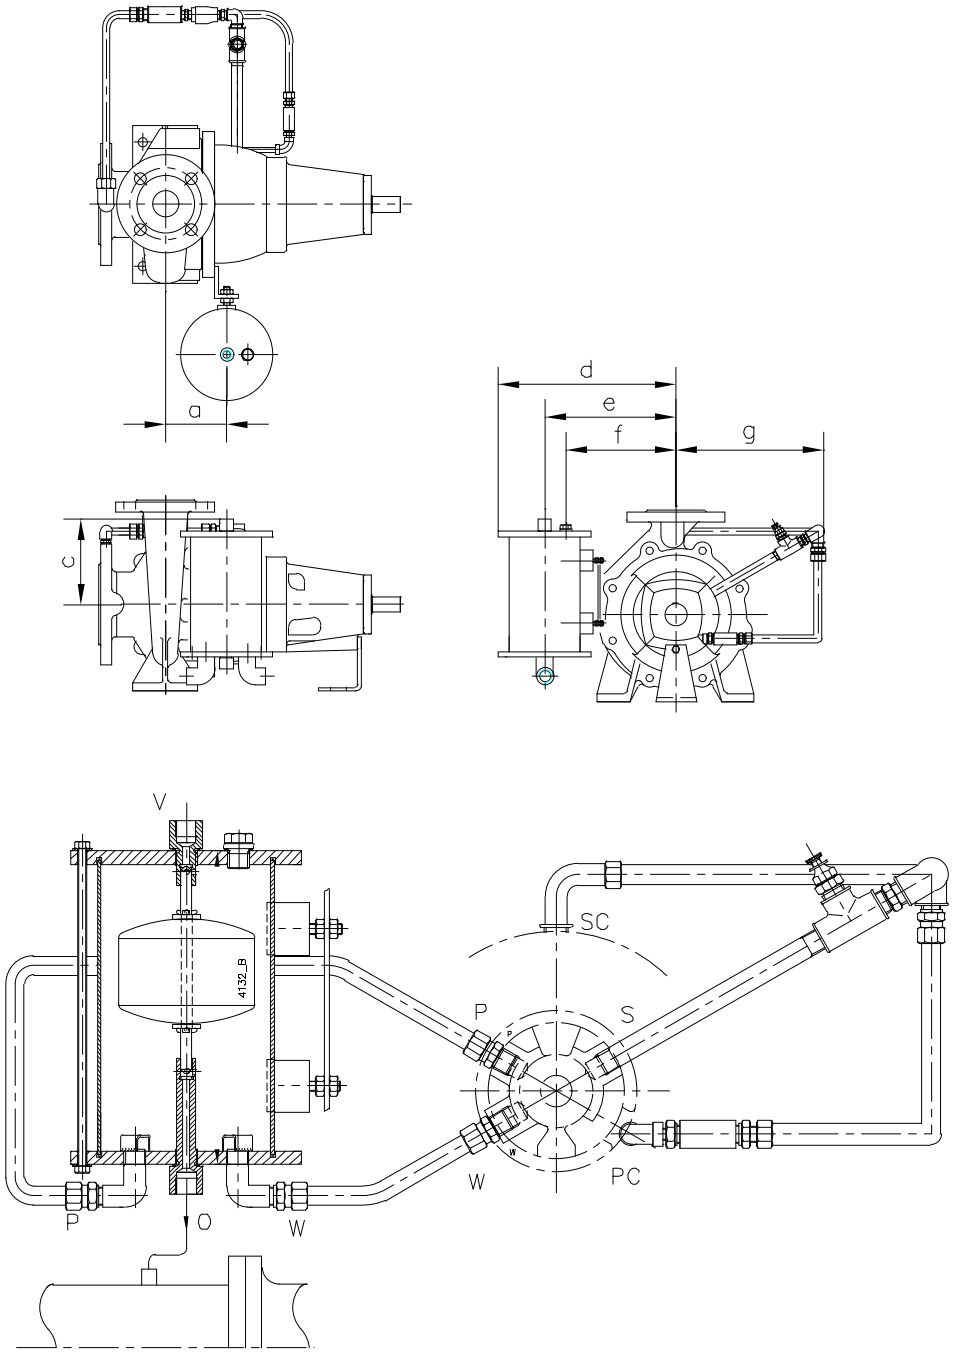

Figure 32: Dimensions pump with float de-aerator.

CH	a	c	d	e	f	g*	g**
32-160	94	243	378	268	268	200	-
32-200	94	233	402	292	292	200	-
32-250	109	243	432	322	322	200	235
40-160	94	243	378	268	268	200	-
40-200	94	233	402	292	292	200	-
40-250	109	243	432	322	322	200	235
50-160	94	243	378	268	268	200	-
50-200	94	233	402	292	292	200	-
50-250	109	243	432	322	322	200	235
65-160	94	243	378	268	268	200	-
65-200	94	233	402	292	292	200	-
65-250	109	243	432	322	322	200	235
65-315	140	209	447	337	337	-	305
80-160	94	243	378	268	268	200	-
80-200	109	233	402	292	292	200	-
80-250	109	243	432	322	322	200	235
80-315	140	209	447	337	337	-	305
80-400	132	209	449	389	389	-	305
100-125	94	243	378	268	268	200	-
100-160	109	233	402	292	292	200	-
100-200	109	233	402	292	292	200	-
100-250	109	243	432	322	322	200	235
100-315	140	209	447	337	337	-	305
100-400	132	209	449	389	289	-	305
125-250	109	243	432	322	322	-	305
125-315	140	209	447	337	337	-	305
125-400	132	209	449	389	389	-	305
150-315	140	209	447	337	337	-	305
150-400	132	209	449	389	389	-	305
200-200	109	243	432	322	322	-	305

* n = 2400 - 3600 min^{-1}

** n = 1450 - 2400 min^{-1}

Connections

V	De-aeration	Rp½
O	Waste water drain	Rp½
S	Inlet self-priming pump	Rp½
SP	Air-intake line	Rp½
P	Outlet self-priming pump	Rp½
W	Inlet service liquid	Rp½
SC	Suction flange connection	Rp½

9 Parts

9.1 Ordering parts

9.1.1 Order form

You can use the order form included in this manual for ordering parts.

When ordering parts always quote the following data:

1 Your **address**.

2 The **quantity, the item number and the description** of the part.

3 The **pump number**. The pump number is stated on the label on the cover of this manual and on the type plate of the pump.

4 In the event of different electric motor voltage you should state the correct voltage.

9.1.2 Recommended spare parts

Parts marked with a * are recommended spare parts.

9.2 Pump parts

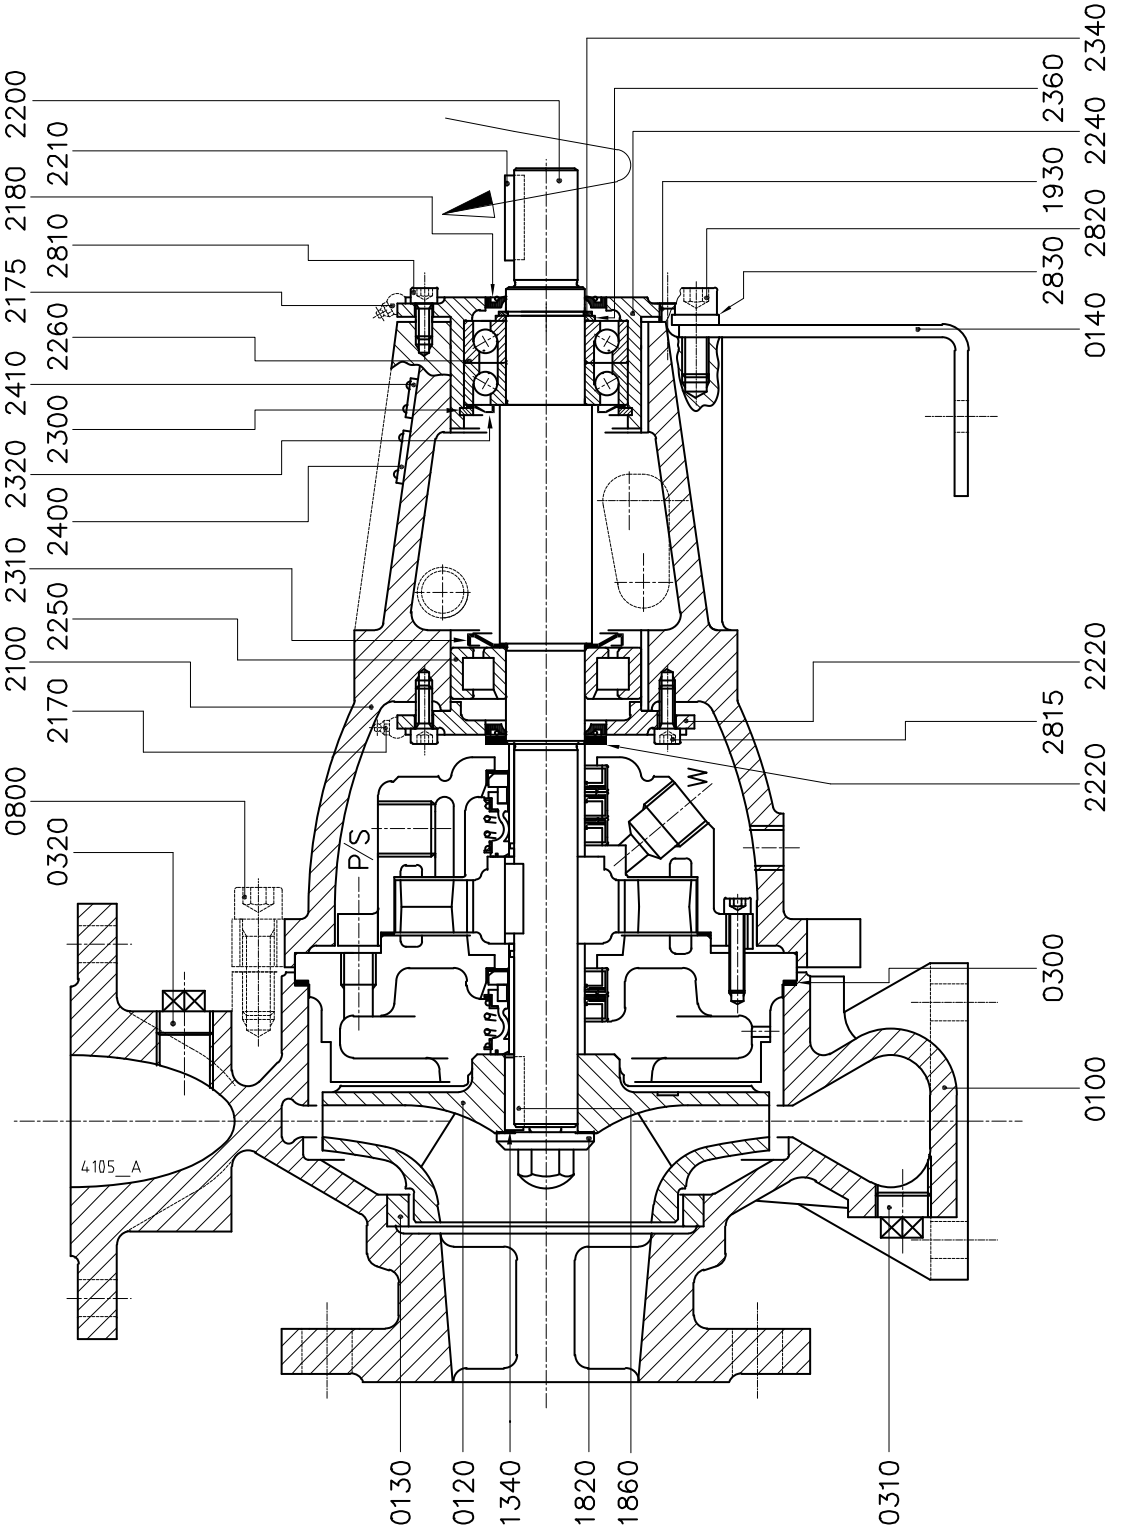

Figure 33: CombiPrime H.

Item	Quantity	Description	Material				
			G1	G2	G3	B2	B3
0100	1	pump casing	cast iron			bronze	
0120*	1	impeller	cast iron	bronze	aluminium bronze	bronze	aluminium bronze
0130*	1	wear ring [1)]	cast iron	bronze			
0140	1	bracket support	steel				
0300*	1	gasket	--				
0310	1	plug	steel			bronze	
0320	1	plug	steel			bronze	
0800	**	Allen screw	steel			stainless steel	
1340*	1	gasket	--				
1820*	1	cap nut	bronze				
1860*	1	impeller key	stainless steel				
1930	4	adjustment screw	stainless steel				
2100	1	bearing bracket	cast iron				
2110	1	bearing cover	cast iron				
2170	1	grease nipple	steel				
2175	1	grease nipple	steel				
2180	2	oil baffle	NBR/spring steel				
2200*	1	pump shaft	steel alloy			stainless steel	
2210*	1	coupling key	steel				
2220*	1	splash ring	rubber				
2240*	1	adjusting bush	cast iron				
2250*	1	roller bearing	-				
2260*	2	angular contact ball-bearing	-				
2300*	1	inner circlip	spring steel				
2310*	1	nilos ring	steel				
2320	1	nilos ring	steel				
2340	1	adjusting ring	steel				
2360*	1	outer circlip	spring steel				
2400	1	nameplate	stainless steel				
2410	1	arrow plate	aluminium				
2810	4	Allen screw	steel				
2815	4	Allen screw	steel				
2820	1	Allen screw	steel				
2830	1	washer	steel				

** Number dependent on pump type 8 or 12

[1)] Item 0130 not for the pump types of bearing bracket 1 and for CH 40-250 and CH 50-250.

9.3 Parts of shaft sealing group M2

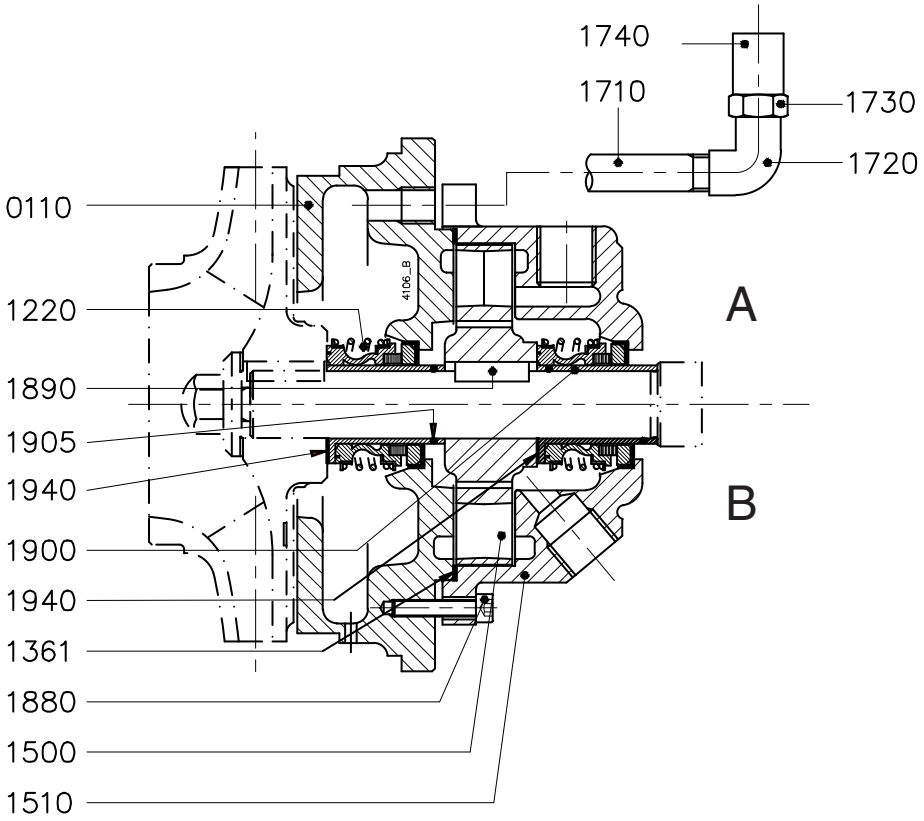

Figure 34: Parts of shaft sealing group M2
(A = bearing group 1 and 2, B = bearing group 3).

Item	Quantity	Description	Material				
			G1	G2	G3	B2	B3
0110	1	pump cover	cast iron			bronze	
1220*	2	mechanical seal	--				
1361*	1	gasket	--				
1500*	1	air-wheel	bronze				
1510	1	self-priming casing	cast iron			bronze	
1710	1	pipe nipple [1)]	steel			stainless steel	
1720	1	knee [1)]	ductile cast iron			stainless steel	
1730	1	reducing nipple [1)]	ductile cast iron			stainless steel	
1740	1	socket [1)]	steel			stainless steel	
1880	8	Allen screw	steel			stainless steel	
1890	1	sunk key	stainless steel				
1900*	2	shaft sleeve	stainless steel				
1905*	2	O-ring	viton				
1940**	2	gasket	--				

[1)] Items 1710, 1720, 1730 and 1740 only for the pump types with a nominal impeller diameter of 160 and 250 mm (n = 1500 / 1800 min^{-1})

** only for bearing bracket group 3

9.4 Parts of shaft sealing group M4

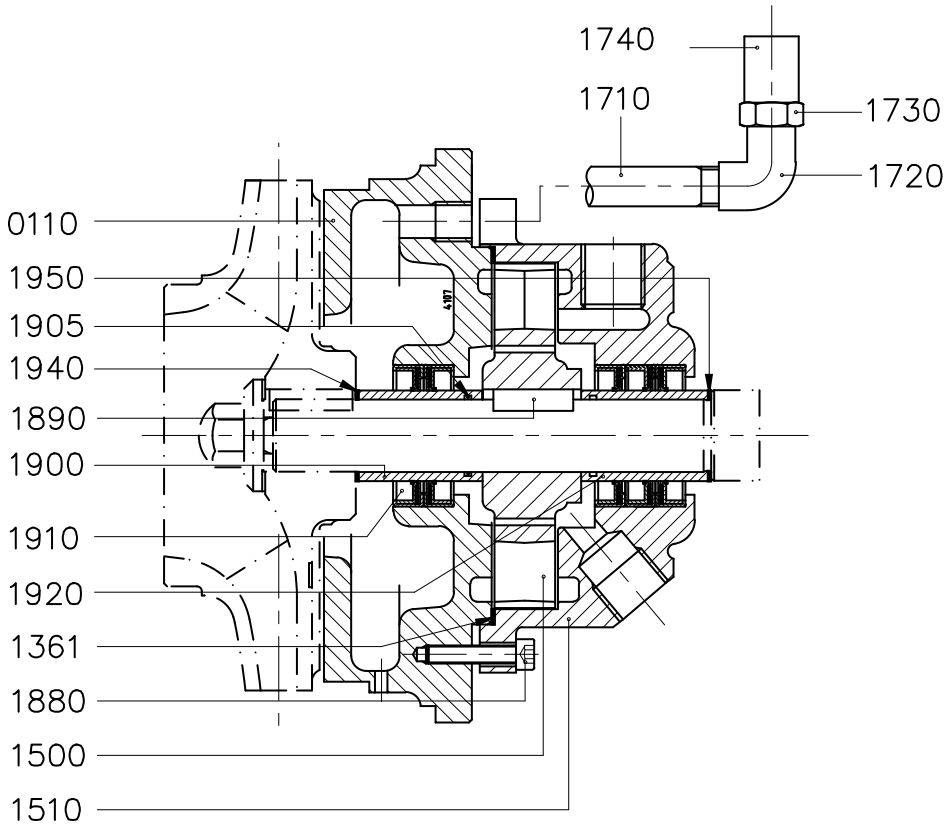

Figure 35: Parts of shaft sealing group M4.

Item	Quantity	Description	Material				
			G1	G2	G3	B2	B3
0110	1	pump cover	cast iron			bronze	
1361*	1	gasket	--				
1500*	1	air-wheel	bronze				
1510	1	self-priming casing	cast iron			bronze	
1710	1	pipe nipple [1)]	steel			stainless steel	
1720	1	knee [1)]	ductile cast iron			stainless steel	
1730	1	reducing nipple [1)]	ductile cast iron			stainless steel	
1740	1	socket [1)]	steel			stainless steel	
1880	5	allen screw	steel			stainless steel	
1890	1	sunk key	stainless steel				
1900*	1	shaft sleeve	stainless steel with wearing layer				
1905*	1	O-ring	viton				
1910*	5	lip seal	PTFE				
1920*	1	shaft sleeve	stainless steel with wearing layer				
1940*	1	gasket	--				
1950*	1	gasket	--				

[1)] Items 1710, 1720, 1730 and 1740 only for the pump types with a nominal impeller diameter of 160 and 250 mm (n = 1500 / 1800 min^{-1})

9.5 Parts of service liquid tank TL

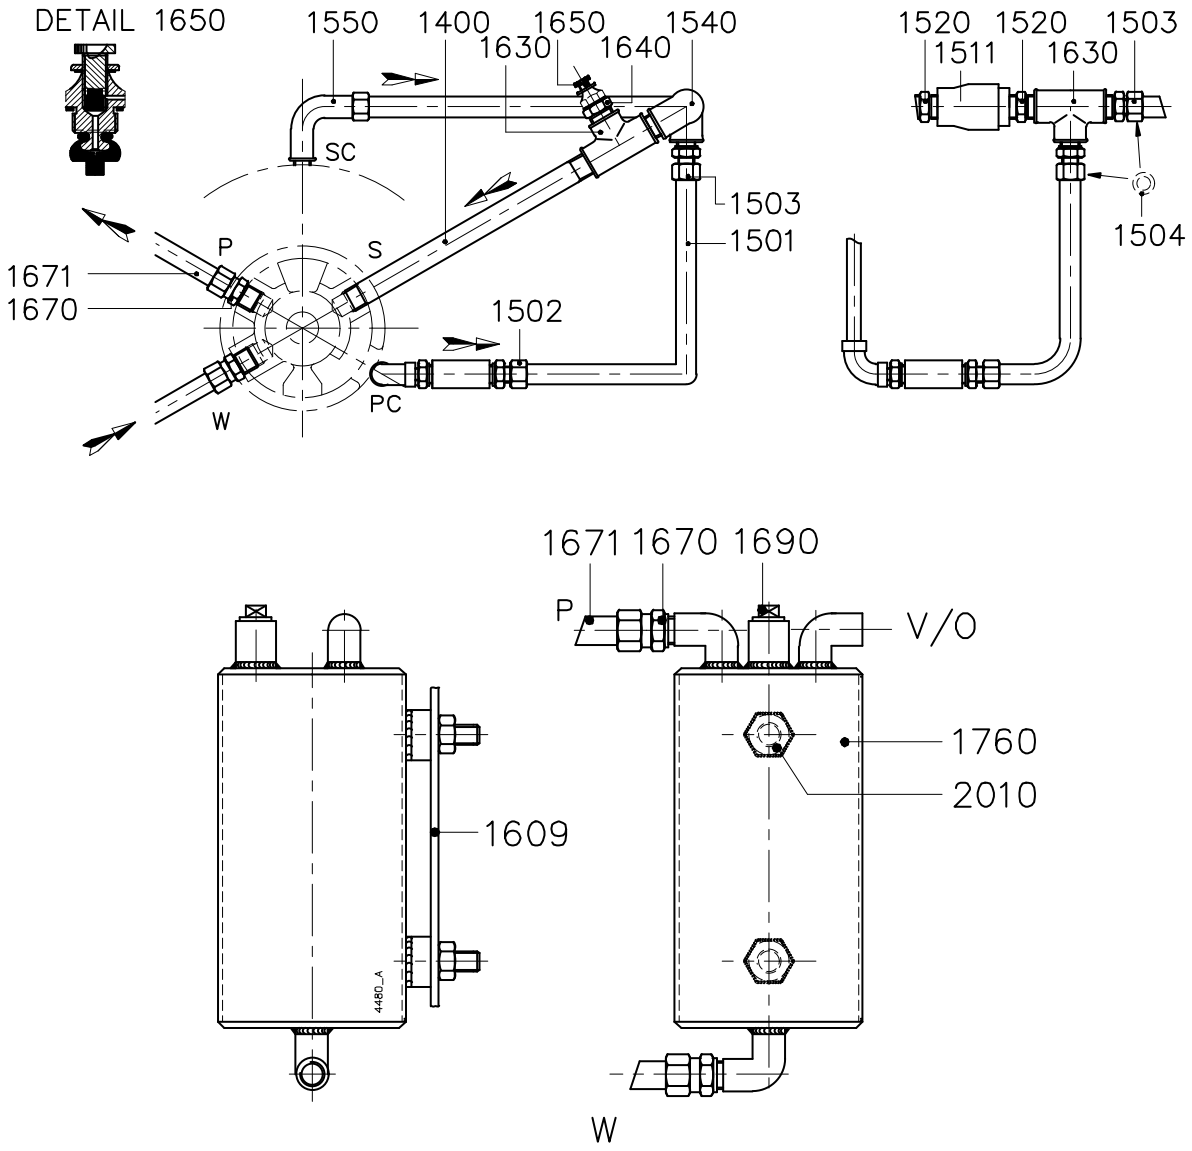

Figure 36: Parts of service liquid tank TL.

Item	Quantity	Description	Material				
			G1	G2	G3	B2	B3
1400	1	pipe nipple	stainless steel				
1501	1	pipe	stainless steel				
1502	1	male connector	stainless steel				
1503	2	male connector	steel			stainless steel	
1504*	2	washer	stainless steel				
1511	1	non return valve	NBR/brass			stainless steel	
1520	2	double nipple	ductile iron			stainless steel	
1540	1	elbow	steel			stainless steel	
1550	1	elbow connector	steel			stainless steel	
1609	1	tank support	steel				
1630	2	T-piece	ductile iron			stainless steel	
1640	1	reducing ring	ductile iron			stainless steel	
1650	1	air inlet valve	brass				
1670	4	male connector	steel			stainless steel	
1671	1	pipe	stainless steel				
1690	1	plug	ductile iron			bronze	
1760	1	tank	stainless steel				
2010	2	nut	steel			stainless steel	

* If the delivery head is over 30 m throttling is applied in order to create a vacuum behind the air inlet valve.

9.6 Parts of float de-aerator VL

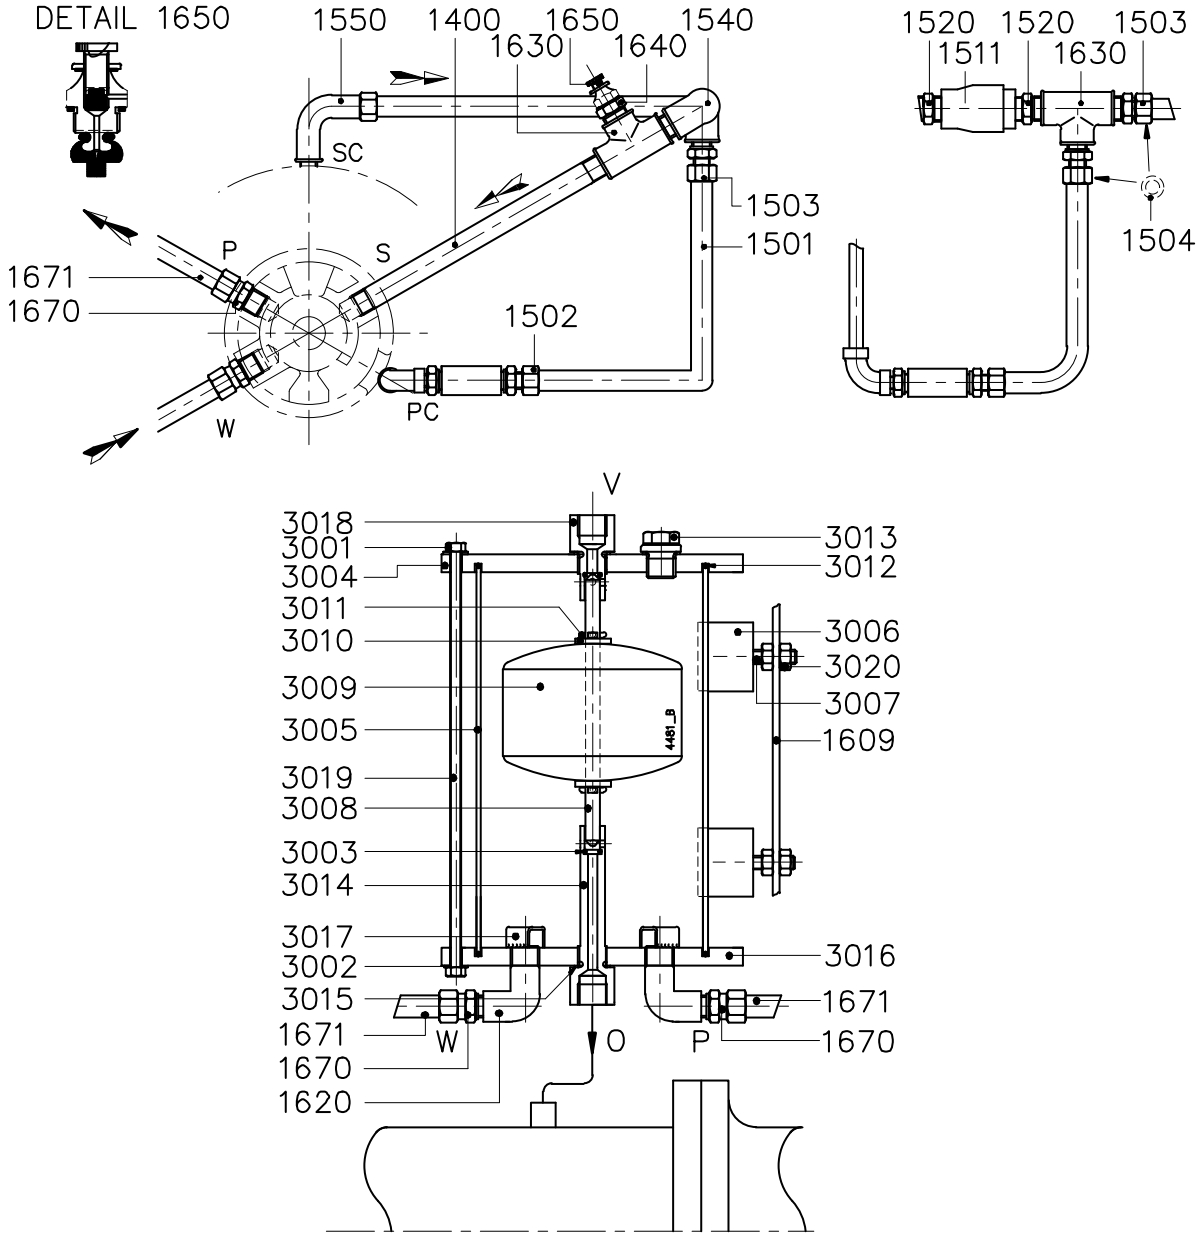

Figure 37: Parts of float de-aerator VL.

Item	Quantity	Description	Material				
			G1	G2	G3	B2	B3
1400	1	pipe nipple	stainless steel				
1501	1	pipe	stainless steel				
1502	1	male connector	stainless steel				
1503	2	male connector	steel			stainless steel	
1504**	2	washer	stainless steel				
1511	1	non-return valve	NBR/brass			stainless steel	
1520	2	double nipple	ductile iron			stainless steel	
1540	1	elbow	steel			stainless steel	
1550	1	elbow connector	steel			stainless steel	
1609	1	tank support	steel				
1630	2	T-piece	ductile iron			stainless steel	
1640	1	reducing ring	ductile iron			stainless steel	
1650	1	air-inlet valve	brass				
1670	4	male connector	steel			stainless steel	
1671	1	pipe	stainless steel				
2010	2	nut	steel			stainless steel	
3001	8	nut	stainless steel				
3002	8	washer	stainless steel				
3003*	2	O-ring	NBR				
3004	1	cover	stainless steel				
3005	1	jacket	stainless steel				
3006	2	bow	stainless steel				
3007	2	tap bolt	stainless steel				
3008*	1	float needle	POM				
3009*	1	float	stainless steel				
3010*	2	washer	stainless steel				
3011*	2	split pin	stainless steel				
3012*	2	O-ring	Viton				
3013	1	plug	stainless steel				
3014	1	long valve seat	stainless steel				
3015	3	joint ring	gylon				
3016	1	bottom	stainless steel				
3017	2	bow	stainless steel				
3018	1	short valve seat	stainless steel				
3019	4	draw bar	stainless steel				
3020	4	nut	stainless steel				

** If the delivery head is over 30 m throttling is applied in order to create a vacuum behind the air inlet valve.

10 Technical data

10.1 Recommended greases

Recommended greases according to classification NLGI-2.

BP	Energrease LS 2
SHELL	Alvania R2
MOBIL	Mobilux EP 2
TOTAL	Multis EP-22
CHEVRON	Polyurea EP Grease-2
ESSO	Beacon 2
FINA	Marson L2
TEXACO	MultifaK EP-2
SKF	Alfalub LGMT 3
Quantity/bearing [gr] = 0,005 * Outer diameter [mm] * bearing width [mm]	

10.2 Recommended locking liquids

Description	Locking liquid
cap nut (1820)	Loctite 243
wear ring (0130)	Loctite 641

10.3 Tightening moments

10.3.1 Tightening moments for bolts and nuts

Materials	8.8	A2, A4
Thread	Tightening moment [Nm]	
M6	9	6
M8	20	14
M10	40	25
M12	69	43
M16	168	105

10.3.2 Tightening moments for cap nuts

Size	Tightening moment [Nm]
M12 (bearing group 1)	43
M16 (bearing group 2)	105
M24 (bearing group 3)	220

10.4 Permissible forces and moments on the flanges

The forces and torques acting on the flanges cause deformations in the pump unit. These are manifested in a displacement of the shaft journal of the pump in relation to the shaft journal of the motor. The permissible forces and moments on the flanges should be based on the following maximum values for the radial displacement of the shaft journal of the pump:

- pumps of bearing group 1: 0,15 mm,
- pumps of bearing group 2: 0,20 mm,
- pumps of bearing group 3: 0,25 mm.

Irrespective of the direction of the forces and torques and their components on the flanges, the permissible values should comply with the following equation:

$$\left(\frac{F_v}{F_{v,\,max}}\right)^2 + \left(\frac{F_h}{F_{h,\,max}}\right)^2 + \left(\frac{M}{M_{max}}\right)^2 \leq 1$$

$F_v = 2/3 \cdot F_{v,\,press} + F_{v,\,suct} \leq F_{v,\,max}$ Index **v** = in vertical direction, **y axis**

$F_h = F_{h,\,press} + 2/3 \cdot F_{h,\,suct} \leq F_{h,\,max}$ Index **h** = in horizontal direction, **x axis and z axis**

$M = M_{press} + M_{suct} \leq M_{max}$ M = torque in the plane of the flange

$F_{v\,max}$, $F_{h\,max}$ and M_{max} are given in the table. A distinction is made here between a pump unit with a base plate not grouted and a pump unit with a base plate which is grouted..

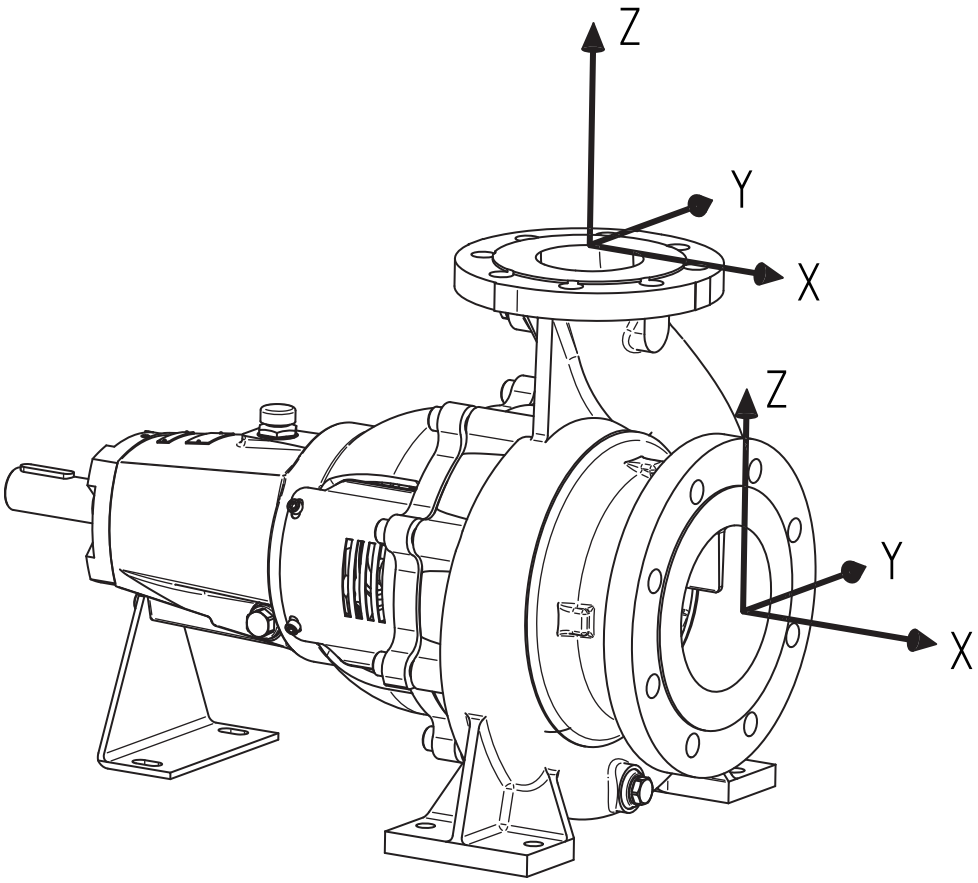

Figure 38: Coordinate system.

Permissible forces and moments on the flanges, based on ISO 5199

See figure 38

CH	bearing group	Pump unit with base plate not grouted			Pump unit with base plate grouted		
		Fv max [N]	Fh max [N]	Mmax [Nm]	Fv max [N]	Fh max [N]	Mmax [Nm]
32-160	1	1250	950	150	2250	1500	425
32-200	1	1250	950	150	2250	1500	425
32-250	2	1250	950	140	2200	1450	400
40-160	1	1300	975	200	2300	1600	500
40-200	1	1300	975	200	2300	1600	500
40-250	2	1250	950	180	2250	1550	475
50-160	1	1450	1050	250	2600	1900	625
50-200	1	1450	1000	270	2500	1750	650
50-250	2	1300	1000	225	2450	1750	600
65-160	2	1500	1050	325	2800	2100	850
65-200	2	1550	1100	350	2900	2200	900
65-250	2	1750	1200	450	3200	2400	1125
65-315	3	1500	1050	325	2800	2100	850
80-160	1	1650	1050	400	3000	2300	1000
80-200	2	1950	1250	500	3400	2550	1225
80-250	2	2250	1450	625	3750	2950	1500
80-315	3	2000	1300	500	3450	2600	1250
80-400	3	2500	1500	750	4100	3250	1750
100-125	1	2200	1400	625	3800	3000	1550
100-160	2	2900	1750	875	4500	3650	2050
100-200	2	3100	1850	900	4575	3900	2175
100-250	3	2600	1550	800	4200	3400	1850
100-315	3	2450	1450	700	4000	3200	1700
100-400	3	2800	1650	875	4450	3550	1950
125-250	2	3950	2400	1300	5550	4800	2800
125-315	3	4100	2550	1400	5750	5000	2950
125-400	3	4000	2500	1375	5700	4900	2875
150-315	3	4600	3000	1600	6200	5700	3300
150-400	3	4600	3000	1600	6200	5700	3300
200-200	2	4000	2500	1375	5700	4900	2875

10.5 Hydraulic performance

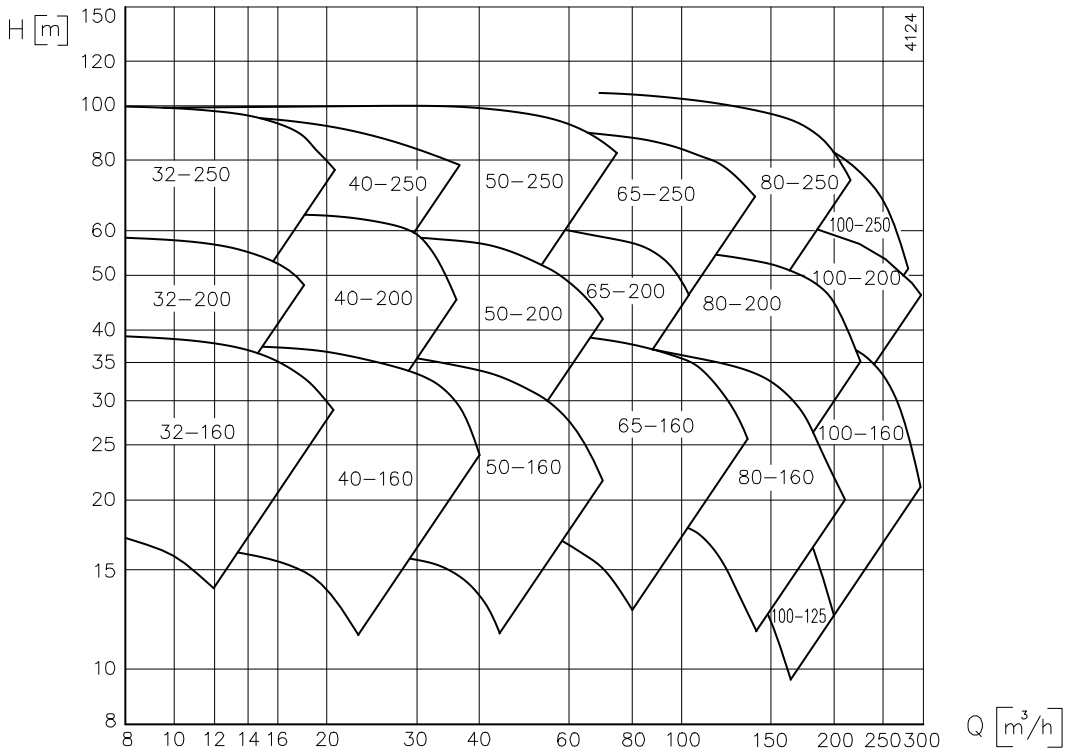

Figure 39: Performance overview 3000 min^{-1}.

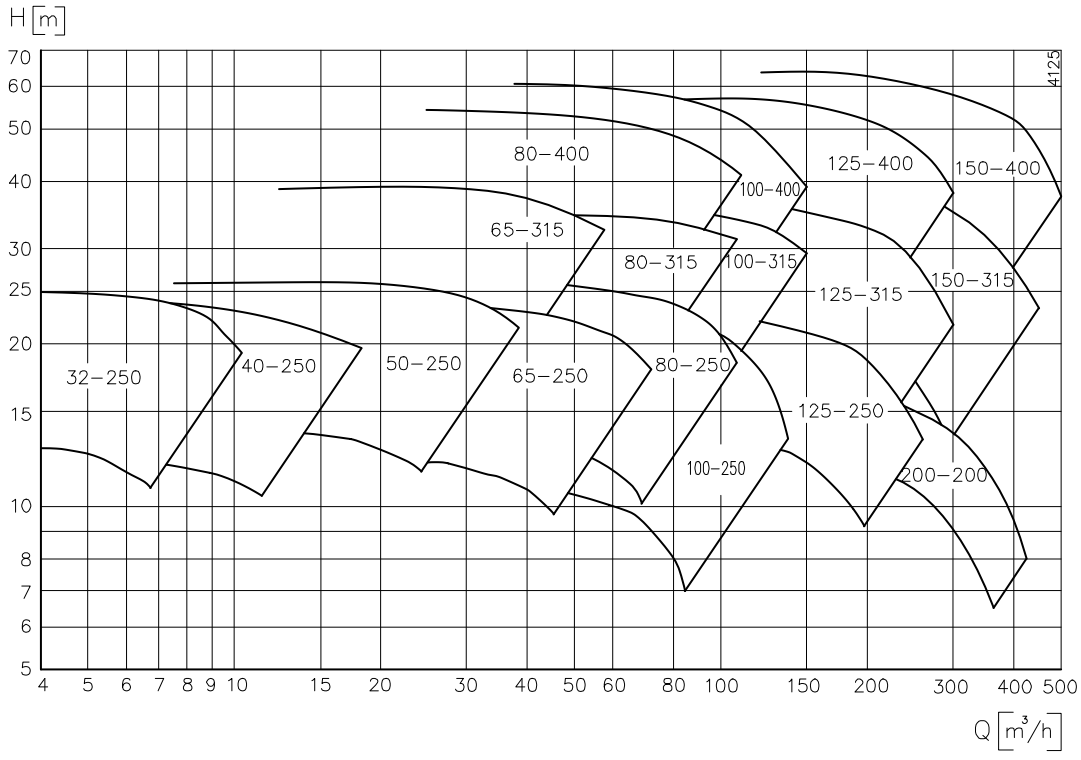

Figure 40: Performance overview 1500 min^{-1}.

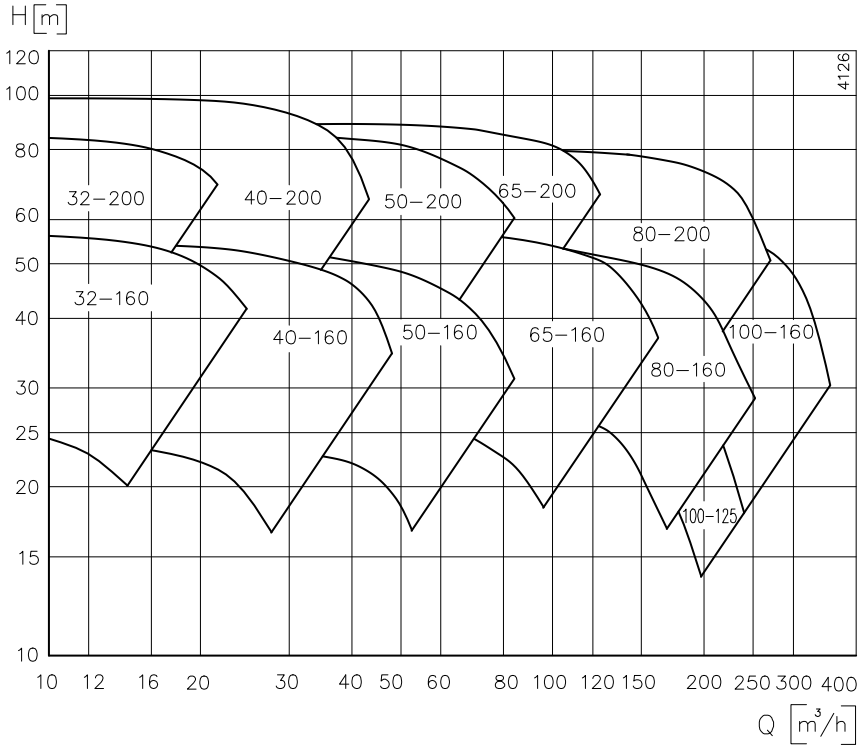

Figure 41: Performance overview 3600 min^{-1}.

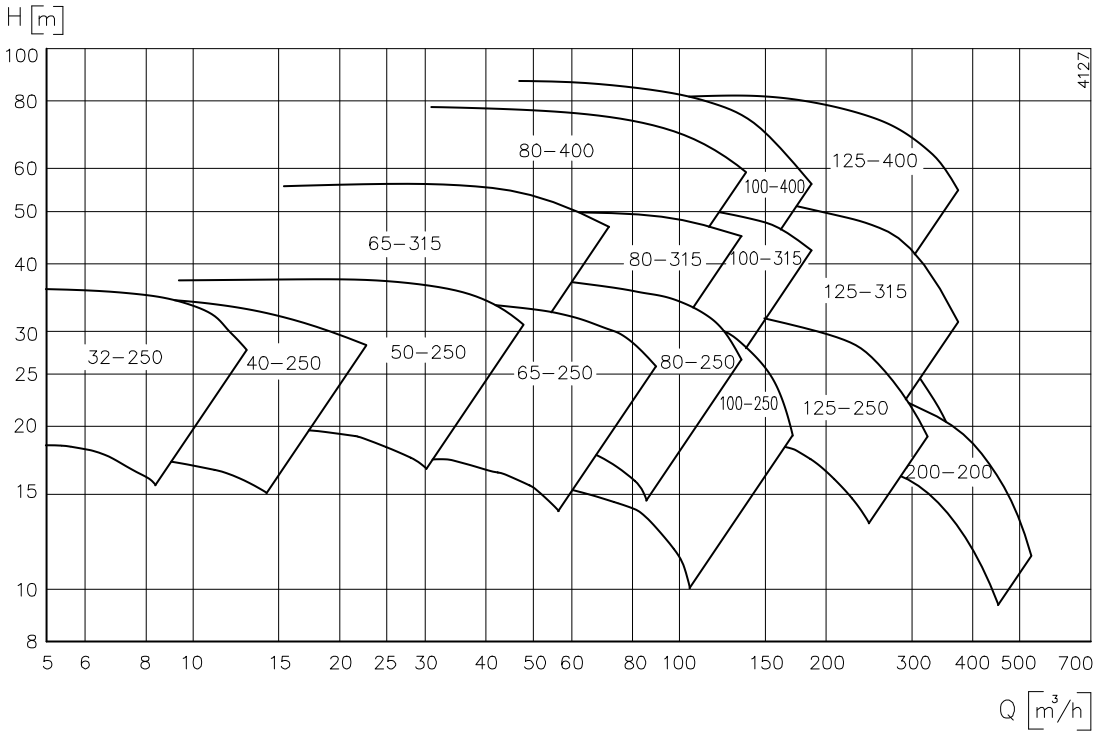

Figure 42: Performance overview 1800 min^{-1}.

10.6 Noise data

10.6.1 Pump noise as a function of pump power

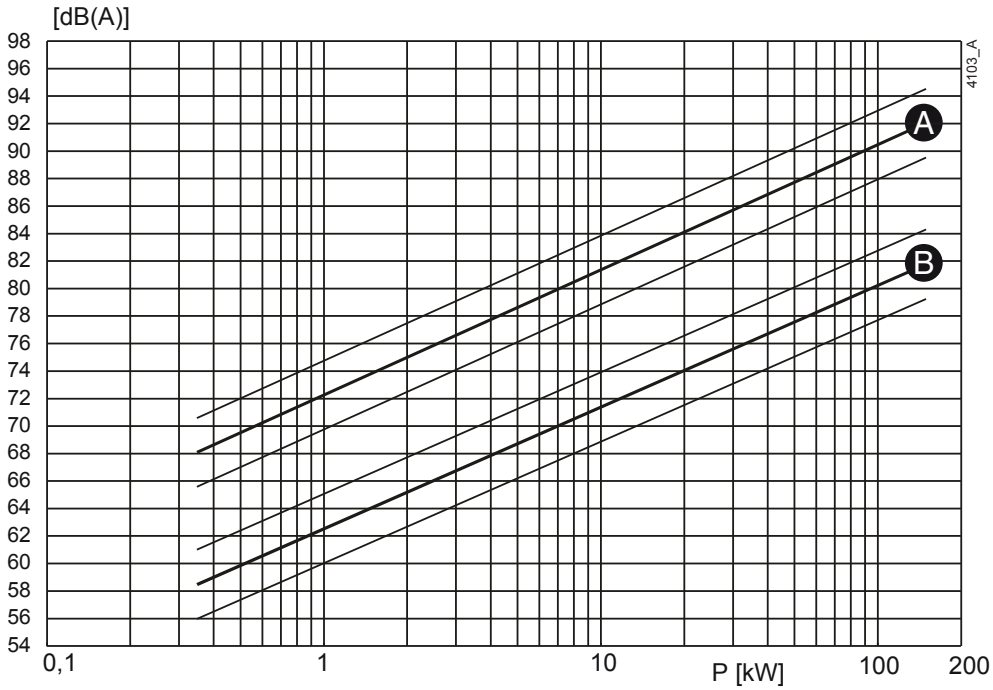

Figure 43: Noise level as function of pump power [kW] at 1450 min^{-1}
A = sound energy, B = sound pressure.

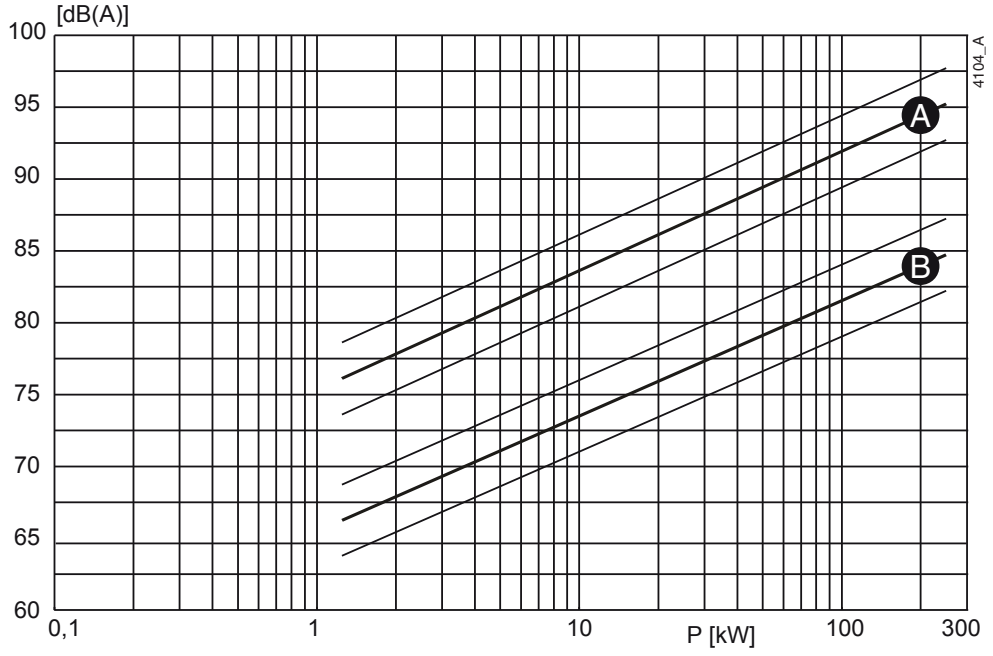

Figure 44: Noise level as function of pump power [kW] at 2900 min^{-1}
A = sound energy, B = sound pressure.

10.6.2 Noise level of entire pump unit

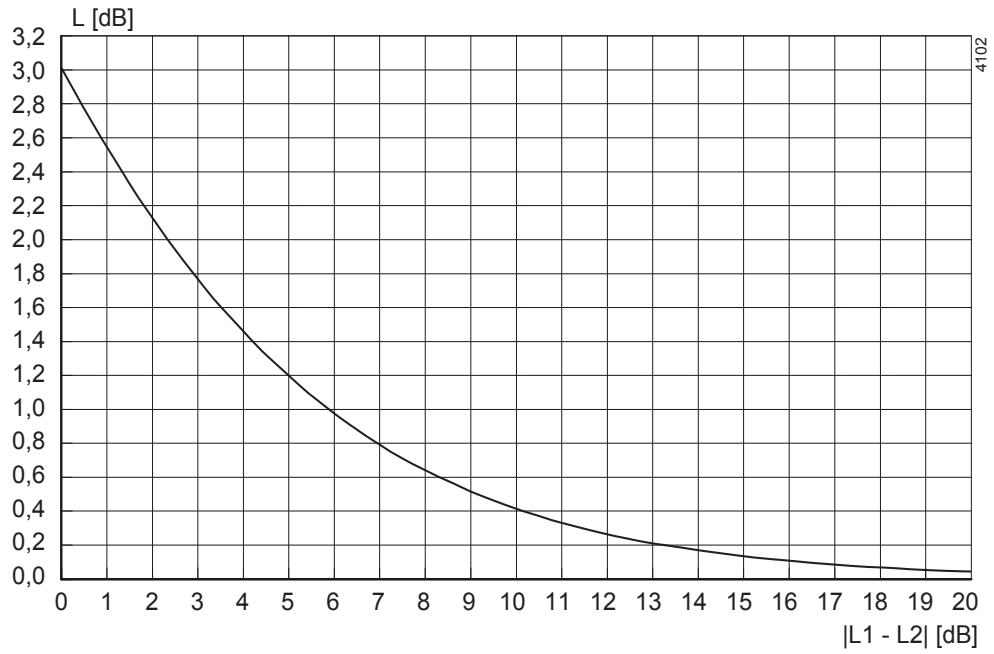

Figure 45: Noise level of entire pump unit.

In order to determine the total noise level of the entire pump unit, the noise level of the motor must be added to that of the pump. This can be easily done by using the graph above.

1 Determine the noise level (L1) of the pump, see figure 43 or figure 44.

2 Determine the noise level (L2) of the motor, see documentation of the motor.

3 Determine the difference between both levels |L1 - L2|.

4 Find the differential value on the |L1 - L2|-axis and go up to the curve.

5 From the curve go left to the L[dB] -axis and read out the value.

6 Add this value to the highest value of both noise levels (L1 or L2).

Example:

1. Pump 75 dB; motor 78 dB.

2. |75-78| = 3 dB.

3. 3 dB on the X-axis = 1,75 dB on the Y-axis.

4. Highest noise level + 1,75 dB = 78 + 1,75 = 79,75 dB.

Index

A
Accessories
mounting 21, 26
Accessories centrifugal pump
mounting 20
Adjusting the air-inlet valve 34
Adjustment of the axial play 52
Application 14
Application area 15

B
Back Pull Out system 40
Back Pull Out unit
assembly 41
disassembly 40
Bearing 50
Bearing groups 14
Bearings
assembly 51

C
Check 34
Combustion engine 31
safety 31
sense of rotation 31
Conservation 17
Construction 14
bearing construction 15
impeller 14
pump casing 14
self-priming part 15
shaft sealing 15
Construction variants 40
Control
centrifugal pump part 33
motor 33
vacuum pump part 33
Coupling
alignment 18
alignment tolerances 19
Coupling guard
disassembly 40

D
Daily maintenance 35

E
Electric motor
connection 31
Environment 17
Environmental influences 36

F
Faults 36
Foundation 17

G
Grease 75
Guarantee 10
Guard
assembly 41

H
Hoisting 11

I
Impeller
assembly 44
disassembly 44
replacement 44

L
Lifting eye 11
Lip seals
assembly 49
disassembly 48
Liquid draining 39
Lubrication of the bearings 35

M
Maintenance
lip seal 35
mechanical seal 35
Maintenance staff 9
Mechanical seal 34
Mechanical seals
assembly 47
disassembly 46

N
Noise 34, 36

O
Operational range 78

P
Pallets 10
Permissible forces on flanges 76
Permissible torques on flanges 76
Piping 20
Precautionary measures 39
Pressure in shaft sealing space 76
Pressure near the impeller hub 76
Pump description 13
Pump shaft
assembly 51
Pump unit
assembly 18
installation 18

R
Recommended greases 75
Recommended locking liquid 75
Re-use 15

S
Safety 9, 17
symbols 9
Scrapping 15
Sense of rotation 33
Serial number 14
Service liquid 35
Shaft sealing 46
Storage 10, 11

T
Technicians 9
Tightening moments
for bolts and nuts 75
for cap nut 75
Tools 39
Transport 10
Type code 13

V
Vacuum pump with float-controlled de-aerator 26
Vacuum pump with service liquid tank ...21

W
Wear ring
assembly 45
disassembly 45
replacement 44
Working switch 31

Order form for spare parts

FAX Nr.	
ADDRESS	

Your order will only be dealt with if this order form has been correctly completed and signed.

Order date:	
Your order number:	
Pump type:	
Execution:	

Quantity	Item. No.	Part	Article number pump

Delivery address:	Invoicing address:

Ordered by:	Signature:	Telephone:

WHERE IDEAS MEET INDUSTRY

Your local contact:

SPX Process Equipment NL B.V.
Dr. A. F. Philipsweg 51, 9403 AD Assen, THE NETHERLANDS
P.O. Box 9, 9400 AA Assen, THE NETHERLANDS
Phone: + 31 (0) 592 37 67 67 Fax: + 31 (0) 592 37 67 60
E-Mail: johnson-pump.nl@processequipment.spx.com

For more information about our worldwide locations, approvals, certifications, and local representatives, please visit www.johnson-pump.com / www.spxpe.com.

SPX Corporation reserves the right to incorporate our latest design and material changes without notice or obligation. Design features, materials of construction and dimensional data, as described in this bulletin, are provided for your information only and should not be relied upon unless confirmed in writing.

Copyright © 2005, 2009 SPX Corporation